




舒乐氏  
衣物护理机(多功能干衣机)  
Multifunction Clothes Dryer  
**SLS-CZ10**

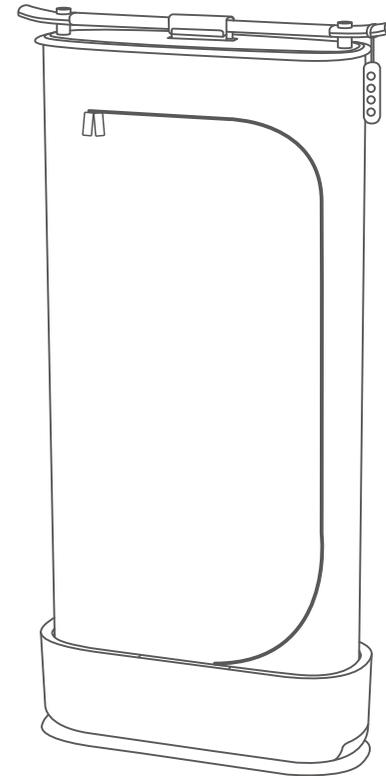

索力雅斯商务咨询(上海)有限公司(商标持有人)  
佛山方信网络科技有限公司

售后服务热线: 400-8083-081 官方网站: [www.soleusair.com](http://www.soleusair.com)  
制造商地址: 广东省佛山市顺德区大良街道北区社区绿田路12号A栋3层304号

## 使用说明书


感谢您购买本产品! 使用产品前请仔细阅读本说明书, 并妥善保管。  
执行标准: GB 4706.1-2005 / GB 4706.60-2008 / GB 4706.84-2007

## 01 / 注意事项

在使用产品之前,请仔细阅读本重要信息,并保管好以供日后参考,包括如下:

1. 请使用标准的供电电压(220V~/50Hz),连接不正确的电压会损坏产品,并使保修失效。
2. 不要在户外使用。不要暴露在阳光下。
3. 插上插头时,不要让衣物护理机处于无人看管状态。不使用时和储藏时请拔下电线插头。
4. 不要将衣物护理机当做玩具,当在儿童,宠物或植物附近使用时需要密切关注。
5. 不要将布套浸泡到水或其它液体中。
6. 应照看好儿童,确保他们不玩耍本器具。
7. 器具不打算由存在肢体、感官或精神能力缺陷或缺乏使用经验和知识的人(包括儿童)使用,除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。
8. 不要拉电源线,不要将电源线作为把手,不要将电源线绕在锋利的边缘上,不要将电源线绕在受热表面。
9. 在没有监管的情况下,清洗以及维护器具的工作不应该由小孩来做。
10. 如果电源软线损坏,为了避免危险,必须由制造商、其维修部或类似的专业人员更换。
11. 不要将插头强制插到不合适的插座。
12. 不要使用电流不足的延长线或插座。
13. 机器使用后,要拔下插头,拔插头时要抓住插头,而不是电源线。
14. 不要用湿手操作电源线插头或其它带电部位,也不要是在没有穿鞋的情况下操作。
15. 不要将任何物体插入蒸汽出口,不要在蒸汽出口堵塞的情况下使用。
16. 使用机器时要将拉链拉好。
17. 在使用蒸汽情况下,需保证水箱有水。
18. 要将机器存放在阴凉干燥的室内。
19. 保持工作区域的光线充足。
20. 不要将芳香,酒精或洗涤剂放入发热器,这样操作不安全并容易损坏机器。
21. 器具仅用于干燥水洗的纺织物。
22. 机器任何部位都不要接触其它发热表面。
23. 注意:蒸汽底座很烫,为了降低受伤的风险,请勿接触靠近蒸汽底座的蒸汽。
24. 请勿将器具用作其他用途。
25. 本机器不含用户可以维修的零件。如果本机器损坏或出现故障,请联系列于本手册内面的客户服务专线。
26. 请勿悬挂超过3kg的衣物。
27. 该器具在工作时,请保持水箱放回到器具的状态。
28. 请将遥控更换下来的电池放到指定的电池回收位置,禁止把电池丢到垃圾桶。
29. 当使用器具时要注意防止由于蒸汽喷溅的危险。

## 02 / 部件介绍

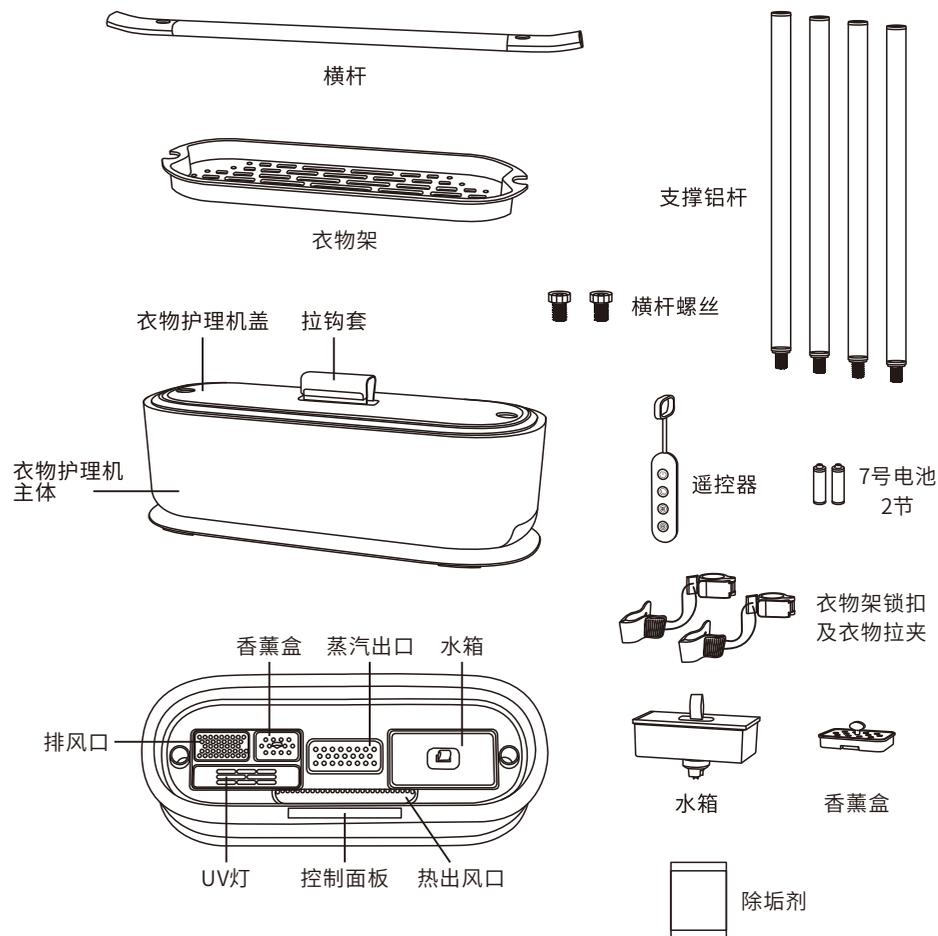


## 03 / 产品参数


|  |                |
|--|----------------|
| 产品名称: 衣物护理机(多功能干衣机)                                  | 产品型号: SLS-CZ10 |
| 额定电压: 220V~  | 水箱容量: 900mL    |
| 额定频率: 50Hz   | 防水等级: IPX1     |
| 额定干衣功率: 900W   | 额定挂烫功率: 900W   |
| 执行标准: GB 4706.1-2005 GB 4706.60-2008 GB 4706.84-2007 |                |

## 04 / 安装说明


1. 从衣物护理机主体底部取出电源线, 然后提起衣物护理机盖, 拉开布套拉链。

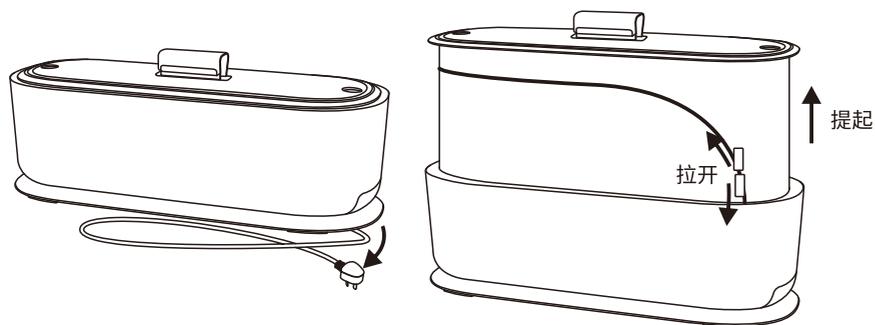


2. 两边各插入一节支撑铝杆并旋紧固定。打开衣物架锁扣, 将其分别插入主机上两边的支撑铝杆并扣紧衣物架锁扣。

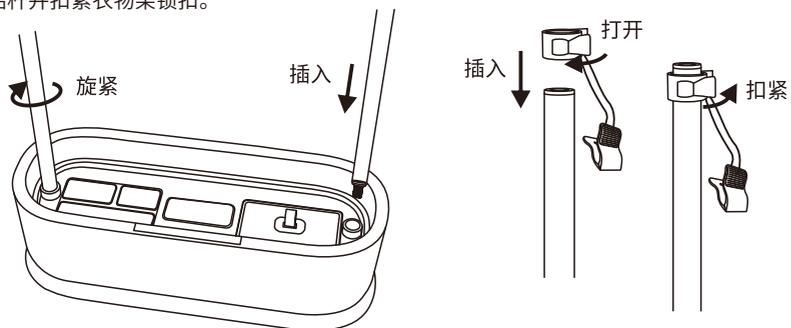


3. 将衣物护理机盖套进主机上两边的支撑铝杆, 然后将另外两根支撑铝杆安装好。

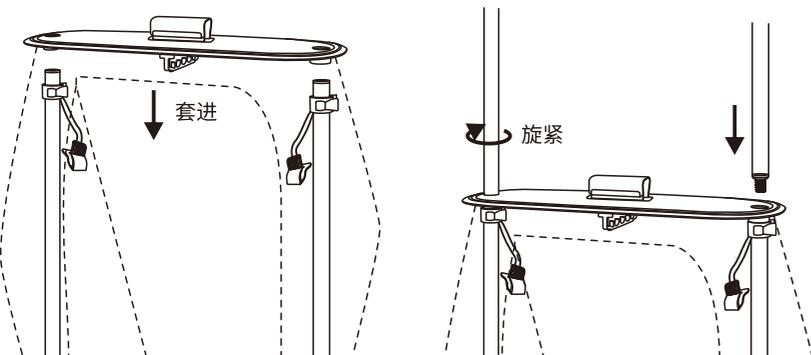


4. 将横杆安装在支撑铝杆顶部, 用横杆螺丝固定好横杆即可。上提衣物护理机盖, 将拉钩套套在横杆上并扣好拉钩套。

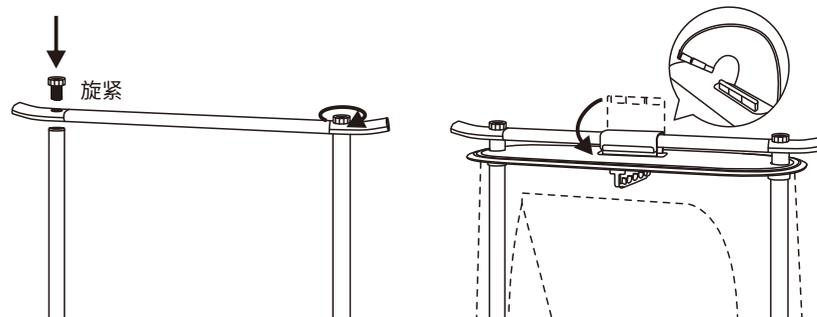

5. 将两边的衣物架锁扣调节到合适的位置, 将衣物架放置在上面, 即可在衣物架上放置内裤或袜子。可根据需求上下移动衣物架锁扣, 从而调整衣物架的位置。

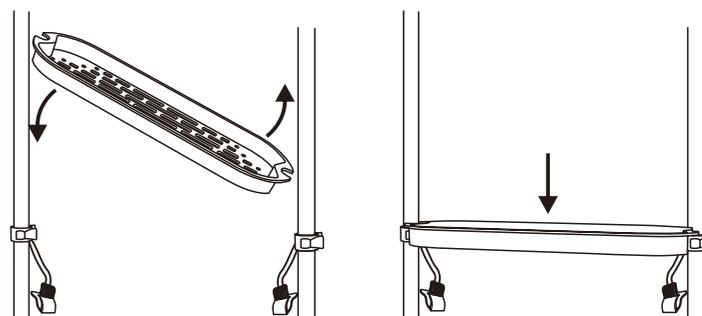


6. 将遥控器挂在横杆上配合使用。

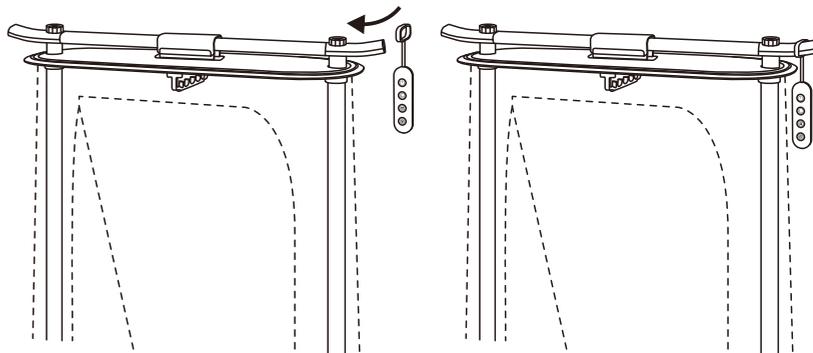


## 05 / 配件使用说明

香薰盒使用说明:从衣物护理机内拿出香薰盒,打开香薰盒将香薰片放进盒内,盖好香薰盒并将其放回原处。

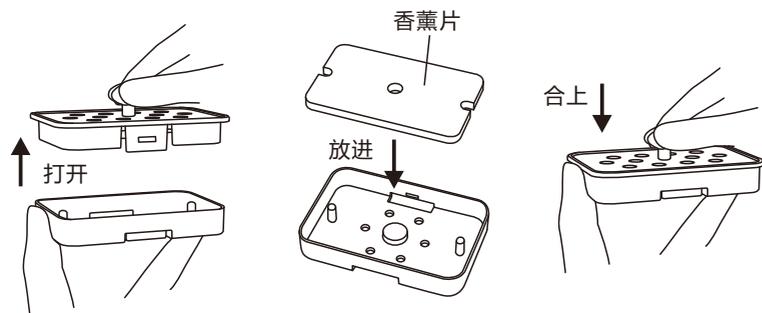

衣物拉夹使用说明:使用除皱模式前,先用衣物拉夹夹住衣物下端,使衣物拉直,可根据需求上下移动衣物架锁扣位置。

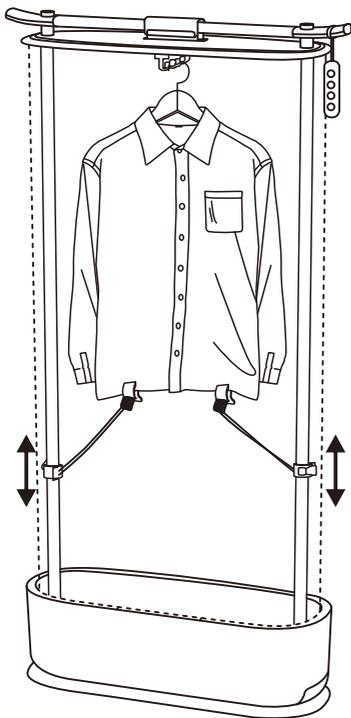

## 06 / 使用说明

1. 操作之前,请确保产品处于未接通电源状态。
2. 打开拉链,取出水箱,拧开水箱盖加满水后再拧紧水箱盖,装回主机里。
3. 将衣物挂进衣物护理机里,拉上拉链即可。
4. 接通电源,电源指示灯闪烁,按一下电源开关键,待指示灯常亮后,即可选择合适的功能。



## ① 电源按键

用于启动机器工作以及进入待机。

## ② 时间设定

用于调整烘干、杀菌、除味模式的使用时间。

## ③ 智能除皱

此功能键用于衣物除皱,根据用户的需要,有三种模式选择:

- 快速:总时间为25分钟,工作时,前5分钟出蒸汽,后15分钟为烘干,最后5分钟开始杀菌。
- 标准:总时间为40分钟,工作时,前10分钟出蒸汽,后25分钟为烘干,最后5分钟开始杀菌。
- 深度:总时间为60分钟,工作时,前15分钟出蒸汽,后40分钟为烘干,最后5分钟开始杀菌。

## ④ 烘干

此功能键用于对烘干衣物,默认180分钟的工作状态,可按“时间设定”键,设定烘干时间,时间分别为:30分钟、60分钟、120分钟、180分钟,依次循环显示,选定后,显示屏闪烁5秒后进入烘干模式。工作最后15分钟,UV灯同时开启工作。

## ⑤ 杀菌

此功能键用于衣物杀菌,默认30分钟的工作状态,可按“时间设定”键,设定杀菌时间,时间分别为:15分钟、20分钟、25分钟、30分钟,依次循环显示,选定后,显示屏闪烁5秒后进入杀菌模式,UV灯工作。

## ⑥ 除味

此功能键用于衣物除味,默认30分钟的工作状态,可按“时间设定”键,设定除味时间,时间分别为:30分钟、45分钟、60分钟,依次循环显示,选定后,显示屏闪烁5秒后进入除味模式。  
总时间为30分钟:工作时,前3分钟为烘干,后5分钟出蒸汽,最后22分钟再烘干。  
总时间为45分钟:工作时,前3分钟为烘干,后8分钟出蒸汽,最后34分钟再烘干。  
总时间为60分钟:工作时,前3分钟为烘干,后12分钟出蒸汽,最后45分钟再烘干。


## ⑦ 缺水

当产品工作时,水箱没水时,缺水灯亮并有声音提示;当水箱再次加满水时,产品恢复正常工作。

**注意:**●本产品有按键提示音,产品在工作即将完成时,会有蜂鸣提示声。

●衣物护理机盖盖上后,产品进入待机保护状态,不能进行任何开关机操作。

## 遥控面板

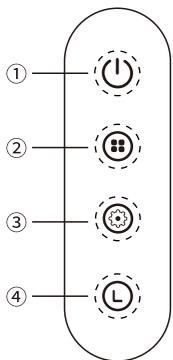

## ① 电源按键

用于启动机器工作以及进入待机。

## ② 功能选择

**烘干:** 此功能键用于对烘干衣物, 默认180分钟的工作状态, 可按“时间设定”键, 设定烘干时间, 时间分别为: 30分钟、60分钟、120分钟、180分钟, 依次循环显示, 选定后, 显示屏闪烁5秒后进入烘干模式。工作最后15分钟, UV灯同时开启工作。

**杀菌:** 此功能键用于衣物杀菌, 默认30分钟的工作状态, 可按“时间设定”键, 设定杀菌时间, 时间分别为: 15分钟、20分钟、25分钟、30分钟, 依次循环显示, 选定后, 显示屏闪烁5秒后进入杀菌模式, UV灯工作。

**除味:** 此功能键用于衣物除味, 默认30分钟的工作状态, 可按“时间设定”键, 设定除味时间, 时间分别为: 30分钟、45分钟、60分钟, 依次循环显示, 选定后, 显示屏闪烁5秒后进入除味模式。

## ③ 智能除皱

此功能键用于衣物除皱, 根据用户的需要, 有三种模式选择:

- 快速: 总时间为25分钟, 工作时, 前5分钟出蒸汽, 后15分钟为烘干, 最后5分钟开始杀菌。
- 标准: 总时间为40分钟, 工作时, 前10分钟出蒸汽, 后25分钟为烘干, 最后5分钟开始杀菌。
- 深度: 总时间为60分钟, 工作时, 前15分钟出蒸汽, 后40分钟为烘干, 最后5分钟开始杀菌。

## ④ 时间设定

用于调整烘干、杀菌、除味模式的使用时间。

遥控器电池型号: 7号电池/RoHS/AAA/1.5V

## 08 / 清洁和维护

注意: ●清洁本产品前, 请确保已断开电源, 并且等待主机冷却后再做清洁。

●请勿将产品浸入水中。

1. 每次使用后, 请将水箱以及产品中残留的水清空, 另外需要打开布套拉链便于风干。

## 2. 清除水垢:

●当产品出蒸汽的时间比较长或停止出蒸汽, 此时, 就需要清除水垢了, 水垢会积聚在金属零件上并影响衣物护理机性能。

●当产品每使用一整箱水达到25-50次或使用时间达一个月时, 尤其是使用硬水的地区, 需要定期清除机内水垢。

注意: 清除水垢的频率, 取决于所使用的水, 在水质较硬的地区, 建议使用蒸馏水或者纯净水, 以确保产品有更好的性能。


## 3. 清洁步骤:

- 1) 准备1:3比例的白醋溶剂和水的混合物加入水箱中。
- 2) 将水箱放入机座, 静置几个小时后, 取出水箱, 将衣物护理机内的水排出。
- 3) 水箱注入干净的水然后从排水口排出。
- 4) 水箱注入干净的水, 将水箱装进衣物护理机并释放蒸汽直至水箱清空为止。
- 5) 重复上面步骤直至蒸汽量产生正常为止。

注意: 在清洁水垢或使用衣物护理机过程中, 请勿使其处于无人看管的状态。

注意: 清除水垢后, 在合适的隔离区域进行清洁测试以确保没有水垢残留在衣物护理机内。

注意: 排出残留的水时, 请勿伸手触碰排水口, 以免高温烫伤。

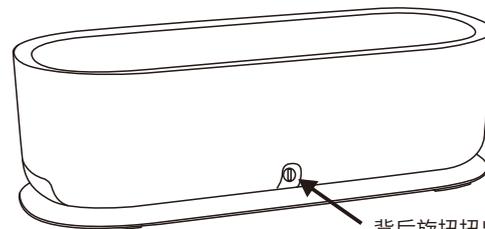


背后旋钮扭出排出残留的水

## 07 / 装箱清单

| 序号 | 名称         | 数量 |
|----|------------|----|
| 1  | 衣物护理机主体    | 1  |
| 2  | 遥控器        | 1  |
| 3  | 说明书        | 1  |
| 4  | 衣物架        | 1  |
| 5  | 衣物架锁扣及衣物拉夹 | 2  |
| 6  | 横杆         | 1  |

| 序号 | 名称   | 数量 |
|----|------|----|
| 7  | 支撑铝杆 | 4  |
| 8  | 7号电池 | 2  |
| 9  | 香薰片  | 1  |
| 10 | 除垢剂  | 1  |
| 11 | 静音挂环 | 1  |

## 09 / 电气原理图

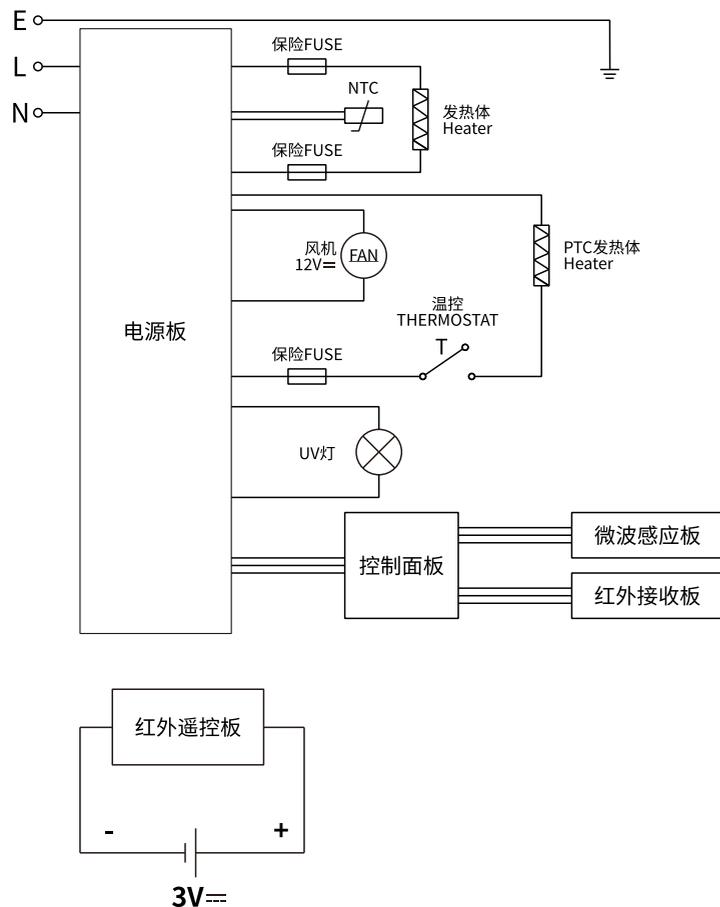

## 10 / 故障排除

| 问题  | 原因   | 解决方法  |
|---|--|---|
| 完全不工作, 指示灯不亮                              | <ul style="list-style-type: none"> <li>电源线插头未插在电源插座上或未接通电源</li> <li>家用断路器/接地故障断路器跳闸或保险丝熔断</li> </ul> | <ul style="list-style-type: none"> <li>将电源线插头插进电源插座上重新接通电源</li> <li>检查线路, 或向符合资格的电工寻求帮助</li> </ul>                                    |
| 通电后无法选择功能                                 | <ul style="list-style-type: none"> <li>产品没有冷却</li> <li>水箱缺水</li> </ul>                               | <ul style="list-style-type: none"> <li>拔掉电源插头或者关闭器具的电源开关, 待冷却后重新接通电源</li> <li>拔掉电源插头或关闭器具的电源开关, 对水箱加满水并正确装入主机内, 待冷却后重新接通电源</li> </ul> |
| 蒸汽量过小                                     | <ul style="list-style-type: none"> <li>电压过低</li> <li>有水垢</li> </ul>                                  | <ul style="list-style-type: none"> <li>请避免在用电高峰时段使用本产品</li> <li>根据说明书的步骤清洁水垢</li> </ul>   |
| 控制面板数码屏显示E1<br>控制面板数码屏显示E2<br>控制面板数码屏显示E3 | <ul style="list-style-type: none"> <li>NTC断路</li> <li>NTC短路</li> <li>NTC松脱</li> </ul>                | <ul style="list-style-type: none"> <li>请联系售后服务热线</li> </ul>   |

## 11 / 环保说明

| 产品中有害物质的名称及含量 |        |        |        |              |            |              |
|---------------|--------|--------|--------|--------------|------------|--------------|
| 部件名称          | 有害物质   |        |        |              |            |              |
|               | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 塑料组件          | ○      | ○      | ○      | ○            | ○          | ○            |
| 温控件           | ○      | ○      | ○      | ○            | ○          | ○            |
| 保险丝           | ○      | ○      | ○      | ○            | ○          | ○            |
| 电源线           | ○      | ○      | ○      | ○            | ○          | ○            |
| PCB 线路板       | ✗      | ○      | ○      | ○            | ○          | ○            |
| 风扇            | ✗      | ○      | ○      | ○            | ○          | ○            |
| 铝杆            | ○      | ○      | ○      | ○            | ○          | ○            |
| 密封圈           | ○      | ○      | ○      | ○            | ○          | ○            |
| 水管            | ○      | ○      | ○      | ○            | ○          | ○            |
| 发热体           | ○      | ○      | ○      | ○            | ○          | ○            |
| 螺丝            | ○      | ○      | ○      | ○            | ○          | ○            |
| 包材资料          | ○      | ○      | ○      | ○            | ○          | ○            |
| 塑料袋           | ○      | ○      | ○      | ○            | ○          | ○            |

本表格依据SJ/T 11364的规定编制

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。

✗：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求以下。



#### 环保使用期限10年：

表示本产品中含有的有害物质不会发生外泄或突变，用户在产品说明书所述情况下正常使用本产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

#### 箭头循环标志：

表示本产品可回收利用。超过使用期限或经过维修无法正常工作后，不应被随意丢弃，请交由正规回收渠道以及有废弃电器电子产品处理资格的企业处理，正确的处理方法请查阅国家或当地有关旧电器电子产品的处理规定。

## 12 / 保修卡

- ① 本产品实行整机保修，保修期为一年，起始日期自开具产品发票或购物凭证之日起计算，整机及主要零部件保修同国家三包政策。
- ② 在保修期内，凡属产品本身质量引起的性能故障，请顾客凭已填好的保修卡及购物凭证到指定维修点免费修理。
- ③ 请妥善保存购机发票或凭证。

以下情况恕不免费维修

- ① 放弃保修卡及有效发票或购物凭证。
- ② 发票型号与维修产品型号不符或者有涂改。
- ③ 未按说明书的要求操作机器所引起的故障。

#### 产品信息：

|      |  |
|------|--|
| 产品名称 |  |
| 产品型号 |  |
| 购买日期 |  |
| 购买地点 |  |
|      |  |

#### 维修记录：

| 维修日期 | 维修情况 |
|------|------|
|      |      |
|      |      |
|      |      |
|      |      |

### 索力雅斯商务咨询（上海）有限公司（商标持有人） 佛山方信网络科技有限公司


售后服务热线：400-8083-081 官方网站：www.soleusair.com

制造商地址：广东省佛山市顺德区大良街道北区社区绿田路12号A栋3层304号



SOLEUS  
Clothing Care Machine  
(Multifunction Clothes Dryer)

SLS-CZ10

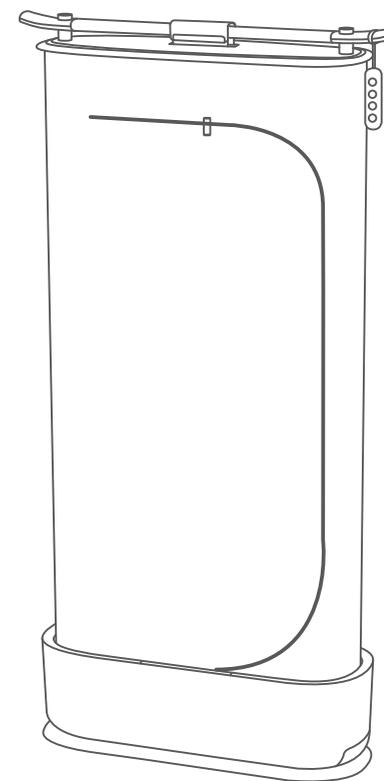

Instructions for Use:

Thank you for purchasing this product! Please read this manual carefully  
before using this product and keep it properly.  
Implementation Standard: GB 4706.1-2005 / GB 4706.60-2008 / GB 4706.84-2007

Soleus Commercial Consulting (Shanghai) Co., Ltd  
(Trademark Holder)

Foshan Fangxin Network Technology Co., Ltd.


After-sales service hotline: 400-8083-081      Official website: [www.soleusair.com](http://www.soleusair.com)  
Manufacturer's address: No.304, Floor 3, Building A, No.12, Lvtian Road, Beiqu Community,  
Daliang Subdistrict, Shunde District, Foshan, Guangdong Province.

## 01/Notes

Before using the product, please read the important information carefully and keep the manual handy for future reference. Important information is as follows:

1. Please use the standard power supply voltage (220V~/50Hz). An incorrect voltage connection will damage the product and invalidate the warranty.
2. Do not use this product outdoors. Do not expose this product to sunlight.
3. Do not leave the clothes dryer unattended while plugged in. Please unplug the cord when it is not in use and when it is stored.
4. Do not use the clothes dryer as a toy. Close attention is required when it is used near children, pets, or plants.
5. Do not soak the cloth cover in water or other liquids.
6. Children should be watched to ensure they do not play with this appliance.
7. The appliance is not intended to be used by persons (including children) who have physical, sensory, or mental impairments or who lack experience and knowledge of the use of this product unless they are supervised or instructed in the use of the appliance by a person responsible for their safety.
8. Do not pull on the cord or use the cord as a handle or wrap the cord around sharp edges or heated surfaces.
9. Cleaning as well as maintaining appliances without supervision should not be done by children.
10. If the power cord is damaged, it must be replaced by the manufacturer, its maintenance department, or professionals in order to avoid danger.
11. Do not force the plug into an unsuitable outlet.
12. Do not use extension cords or outlets without sufficient current.
13. Unplug the machine after use. When unplugging a cord, pull on the plug, not the cord.
14. Do not operate the plug or other live parts of the power cord with wet hands, and do not operate without your shoes on.
15. Do not insert any object into the steam outlet and do not use this product with the steam outlet blocked.
16. Zip up the machine when using it.
17. When using steam, make sure there is water in the water tank.
18. This product should be stored in a cool and dry room.
19. Keep the work area well-lit.
20. Do not put fragrance, alcohol, or detergent into the heater as this is unsafe and can easily damage the machine.
21. This product is intended for use on dry-washed textiles only.
22. Do not allow any part of the machine to come into contact with other hot surfaces.
23. Caution: The steam base is very hot. To reduce the risk of injury, do not touch the steam near the steam base.
24. Do not use the appliance for other purposes.
25. This machine does not contain parts that can be repaired by the user. If the machine is damaged or malfunctions, please contact the customer service line listed on the inside of this manual.
26. Do not hang clothes over 3 kg.
27. When this appliance is working, please keep the water tank inside the appliance.
28. Please put the used batteries from the remote control at the designated place. Do not throw batteries in a trash.
29. Caution: Steam puff may bring about danger in use.

## 02/Component Description

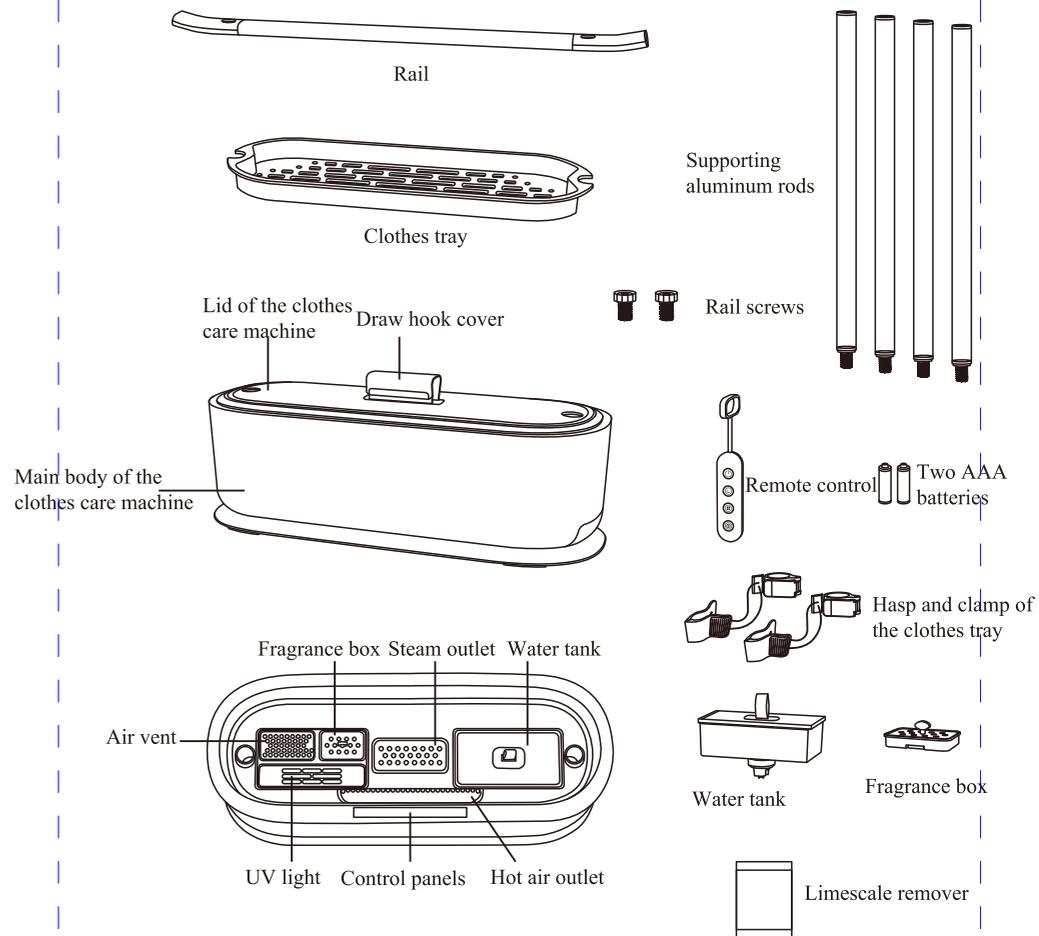


## 03/Product Parameters

|   |  |
|---|--|
| Product Name: Clothing Care Machine<br>(Multi-functional Clothes Dryer) | Product model: SLS-CZ10                |
| Rated voltage: 220V~  | Water tank capacity: 900 mL            |
| Rated frequency: 50Hz   | Waterproof rating: IPX1                |
| Rated power for dryer: 900 W  | Rated power for garment steamer: 900 W |


Executive Standard: GB 4706.1-2005 GB 4706.60-2008 GB 4706.84-2007

## 04/Instruction for Installation


1. Remove the power cord from the bottom of the main body of the clothes care machine, then lift the lid of the machine and unzip the cloth cover.

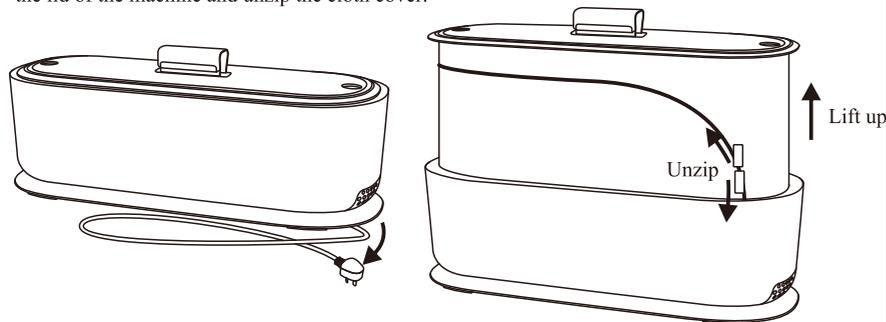


2. Insert a supporting aluminum rod on each side and fix it in place. Unhasp the clothes tray, insert it into the supporting aluminum rods on both sides of the main body and hasp the clothes tray.

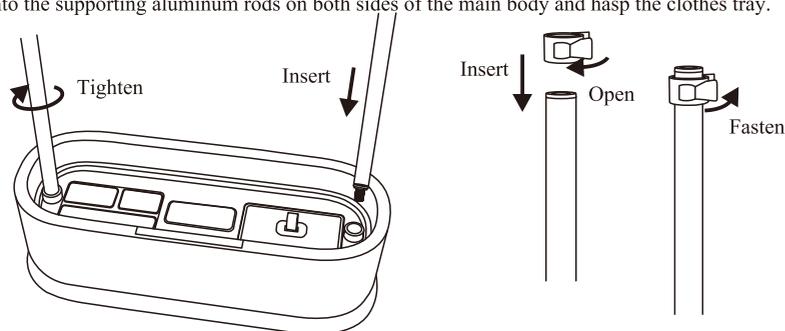


3. Slip the clothes care machine lid into the supporting aluminum rods on both sides of the main body, and then install the other two supporting aluminum rods.

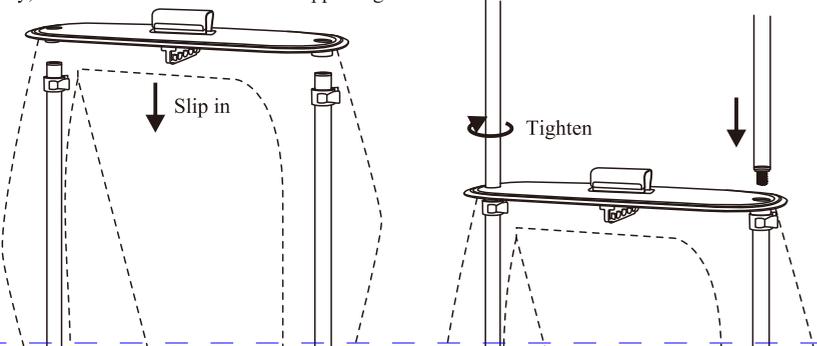


4. Install the rail on the top of the supporting aluminum rods and fix the rail with the rail screws. Lift the clothes care machine lid, put the draw hook cover on the rail and fasten the draw hook cover.

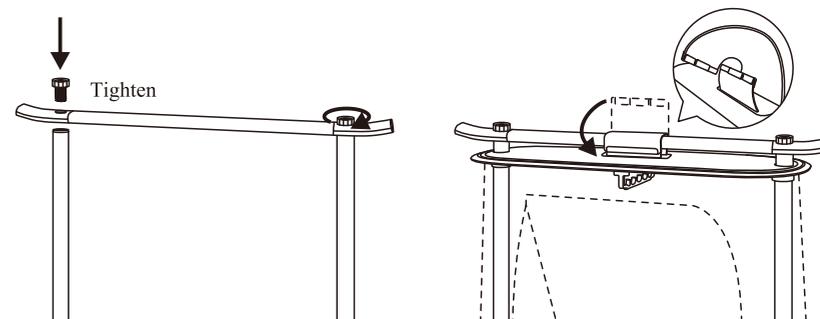

5. Adjust the hasps of the clothes tray on both sides to the right position, place the clothes tray on top, and you can place underwear or socks on the clothes tray. To meet different demands, the hasp of the clothes tray can be moved up and down to adjust height of the tray.

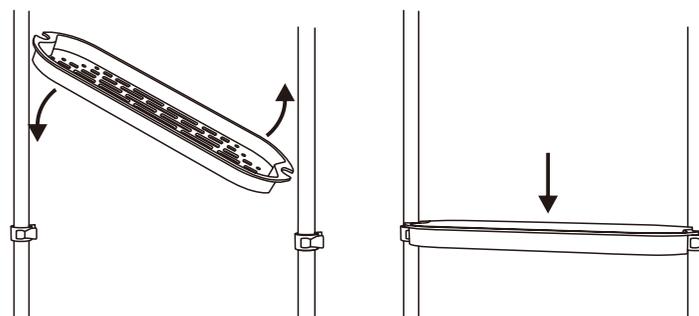


6. Hang the remote control on the rail to use with it.

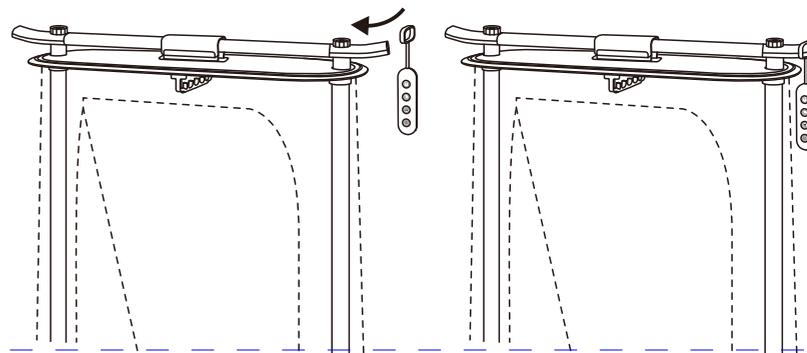


## 05/Instructions for Use of Accessories

Instructions for Use of Fragrance Box: Take the fragrance box from the clothes care machine, put in the aroma pad, close the box and put it back in the machine.

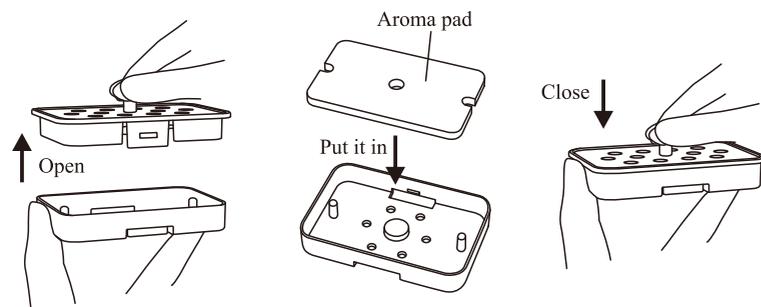


Instructions for Use of Clothes Clamp: Before activating the wrinkle removal mode, fix the lower part of the clothes with the clamp to make them straighten. The hasp of the clothes tray can be moved up and down to adjust the height of the tray.

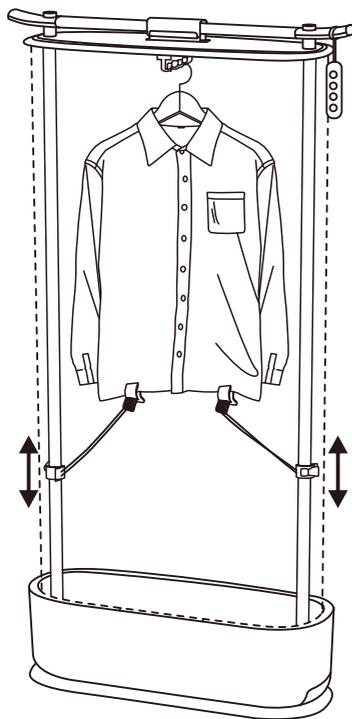

## 06/Instructions for Use


1. Make sure the product is not powered on before operation.
2. Open the zipper and remove the tank. Unscrew the water tank cover and fill the tank with water, then screw the cover and put the tank back in place.
3. Hang clothes in the clothes care machine and zip it up.
4. Turn on the power. When the power switch indicator flashes, press the power switch button, and when the indicator light is always on, you can select the appropriate function.

Control panels

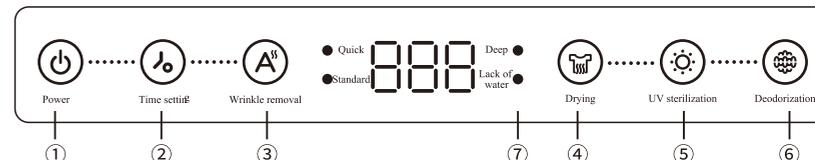

- ① **Power button** Used to start the machine and enter standby.
  - ② **Time setting** Adjust the time for drying, sterilization, and deodorization.
  - ③ **Wrinkle removal**  
This function key is used for clothing wrinkle removal and has three modes to choose from, depending on the user's needs:
    - **Quick:** It lasts 25 minutes. During the process, steam is produced in the first 5 minutes, clothes are dried in the next 15 minutes, and sterilized in the last 5 minutes.
    - **Standard:** It lasts 40 minutes. During the process, steam is produced in the first 10 minutes, clothes are dried in the next 25 minutes, and sterilized in the last 5 minutes.
    - **Deep:** It lasts 60 minutes. During the process, steam is produced in the first 15 minutes, clothes are dried in the next 40 minutes, and sterilized in the last 5 minutes.
  - ④ **Drying**  
This function key is used for drying clothes, and the default duration is 180 minutes. You can press the "time setting" button to set the drying duration with four options: 30 minutes, 60 minutes, 120 minutes, and 180 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter the drying mode. In the last 15 minutes of the drying process, the UV light will start to work.
  - ⑤ **Sterilization**  
This function key is used for clothes sterilization, and the default duration is 30 minutes. You can press the "time setting" button to set the sterilization duration with four options: 15 minutes, 20 minutes, 25 minutes, and 30 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter the sterilization mode and the UV light starts to work.
  - ⑥ **Deodorization**  
This function key is used for deodorizing clothes, and the default duration is 30 minutes. You can press the "time setting" button to set the deodorization duration with three options: 30 minutes, 45 minutes, and 60 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter the deodorization mode.  
The whole process takes 30 minutes: the first 3 minutes are for drying, the following 5 minutes for steaming, and the last 22 minutes for drying again.  
The whole process takes 45 minutes: the first 3 minutes are for drying, the following 8 minutes for steaming, and the last 34 minutes for drying again.  
The whole process takes 60 minutes: the first 3 minutes are for drying, the following 12 minutes for steaming, and the last 45 minutes for drying again.
  - ⑦ **Lack of water**  
When the product is working and the water tank is out of the water, the water shortage indicator light will be on and there will be an audible alert. When the tank is filled up, the product returns to normal operation.
- Notes:**
- This product has a key beep. The product will beep when it is about to complete its work.
  - After the lid of the clothes care machine is covered, the product will enter the standby protection state and no on-off operation is allowed.

## Remote Control Panel

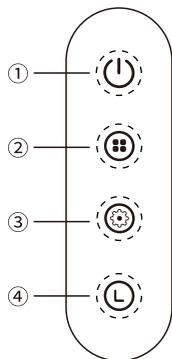

- **Power button**

Used to start the machine and enter standby.

- **Function selection**

**Drying:** this function key is used for drying clothes and the default working time is 30 minutes. You can press the "time setting" button to set the working time with four options: 30 minutes, 60 minutes, 120 minutes, and 180 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter the drying mode.

**Sterilization:** this function key is used for clothes sterilization, and the default duration is 30 minutes. You can press the "time setting" button to set the sterilization duration with four options: 15 minutes, 20 minutes, 25 minutes, and 30 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter sterilization mode and the UV light starts to work.

**Deodorization:** this function key is used for deodorizing clothes and the default duration is 30 minutes. You can press the "time setting" button to set the deodorization duration with three options: 30 minutes, 45 minutes, and 60 minutes, respectively. The options are displayed cyclically. Once selected, the display screen will flash for 5 seconds to enter the deodorization mode.

- **Wrinkle removal**

This function key is used for clothing wrinkle removal and has three modes to choose from, depending on the user's needs:

- **Quick:** It lasts 30 minutes. During the process, steam is produced in the first 5 minutes, clothes are dried in the next 20 minutes, and sterilized in the last 5 minutes.
- **Standard:** It lasts 70 minutes. During the process, steam is produced in the first 10 minutes, clothes are dried in the next 60 minutes, and sterilized in the last 10 minutes.
- **Deep:** It lasts 180 minutes. During the process, steam is produced in the first 15 minutes, clothes are dried in the next 165 minutes, and sterilized in the last 15 minutes.

- **Time setting**

Adjust the time for drying, sterilization, and deodorization.

Remote control battery model: AAA / 1.5V / RoHS

## 07/Package list

| Serial number | Name                                  | Quantity | Serial number | Name                     | Quantity |
|---------------|---------------------------------------|----------|---------------|--------------------------|----------|
| 1             | Main body of the clothes care machine | 1        | 7             | Supporting aluminum rods | 4        |
| 2             | Remote control                        | 1        | 8             | AAA batteries            | 2        |
| 3             | Instruction                           | 1        | 9             | Aroma pad                | 1        |
| 4             | Clothes tray                          | 1        | 10            | Limescale remover        | 1        |
| 5             | Hasp and clamp of the clothes tray    | 2        | 11            | Noise reduction ring     | 1        |
| 6             | Rail                                  | 1        |               |                          |          |

## 08/Cleaning and maintenance

- Note:
- Please make sure that the power is disconnected and wait for the main machine to cool down before cleaning this product.
  - Do not soak the product in water.

1. After use, please empty the remaining water out of the tank and the product, and unzip the cloth cover for air drying.
2. Removing limescale:
  - When it takes a long time for the product to produce steam or when the product stops producing steam, it is necessary to remove limescale, which can build up on metal parts and affect the performance of the clothes care machine.
  - When the water tank has been fully filled 25–50 times or the product has been used for a month, limescale removal should be carried out regularly, especially for those who use the product in hard water areas.

**Note: The frequency of limescale removal depends on the water you are using. In areas with hard water, it is suggested that you use distilled or purified water to ensure better performance of the product.**


3. Cleaning steps:

- 1) Mix the white vinegar solvent with water in a ratio of one to three and add it to the water tank.
- 2) Put the water tank into the machine base and let it sit for a few hours, then remove the tank and drain the water from the clothes care machine.
- 3) Fill the water tank with clean water and then drain it through the drainage outlet.
- 4) Fill the water tank with clean water, put the tank into the clothes care machine, and release the steam until the water tank is empty.
- 5) Repeat the above steps until the volume of steam becomes normal.

**Note: Do not leave it unattended while cleaning limescale or using the clothes care machine.**


**Note: After removing limescale, perform a cleaning test in a suitable isolated area to ensure that no limescale remains in the clothes care machine.**

Note: Please do not touch the drainage outlet to avoid the risk of scalding when the machine is working.

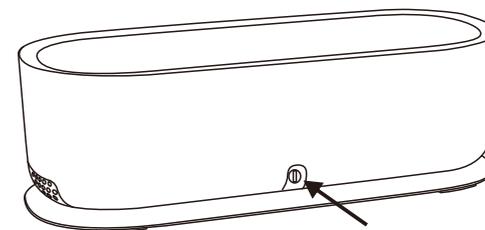

Rotary knob on the back for draining the remaining water

## 09/Electrical schematic diagram

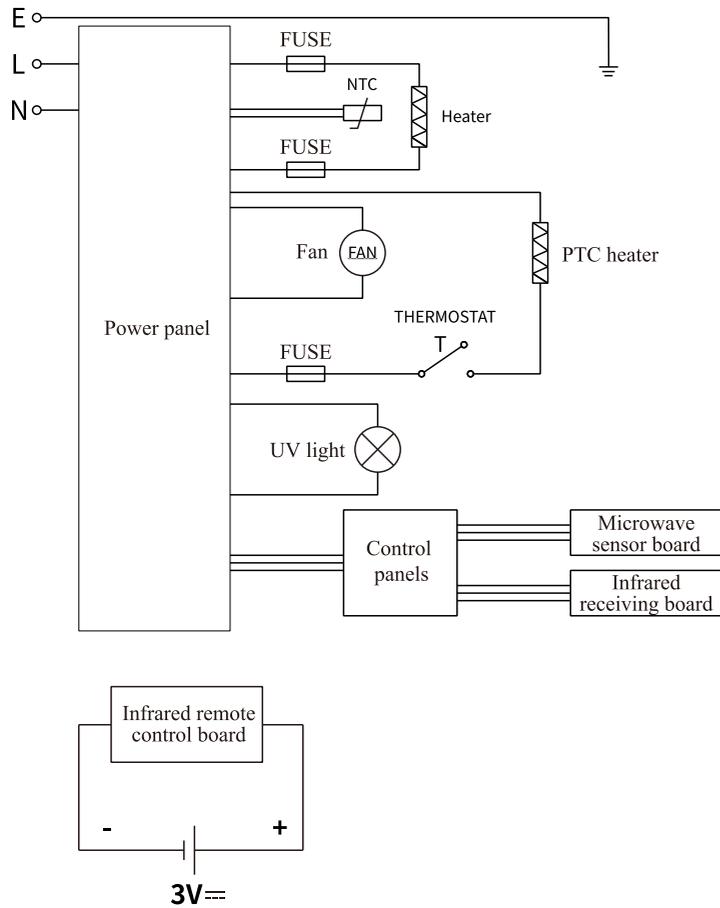

## 10/Troubleshooting

| Problems  | Reasons   | Solutions  |
|---|---|--|
| Not working at all. No indicator light.   | <ul style="list-style-type: none"> <li>■ The plug of the power cord is not plugged into the outlet or is not connected to the power.</li> <li>■ Household circuit breaker/ground fault circuit breaker tripped or the fuse is blown.</li> </ul> | <ul style="list-style-type: none"> <li>• Plug the power cord into the power outlet and turn the power back on.</li> <li>• Check the wiring or get help from a qualified electrician.</li> </ul>  |
| Unable to select function after power on.   | <ul style="list-style-type: none"> <li>■ The product has not cooled yet.</li> <li>■ The water tank is out of water.</li> </ul>  | <ul style="list-style-type: none"> <li>• Please unplug the power plug or turn off the power switch of the appliance, and turn on the power again after the appliance cools down.</li> <li>• Please unplug the power plug or turn off the power switch of the appliance, fill the water tank with water and install it in the machine correctly, and turn on the power again after the appliance cools down.</li> </ul> |
| Too little steam.   | <ul style="list-style-type: none"> <li>■ Low voltage</li> <li>■ Limescale warning</li> </ul>  | <ul style="list-style-type: none"> <li>• Please avoid using this product during the peak hours of electricity consumption.</li> <li>• Follow the steps in the instructions to remove the limescale.</li> </ul>   |
| Digital screen of the control panel displays "E1"<br>Digital screen of the control panel displays "E2"<br>Digital screen of the control panel displays "E3" | <ul style="list-style-type: none"> <li>■ NTC open-circuited</li> <li>■ NTC short-circuited</li> <li>■ NTC loose</li> </ul>  | <ul style="list-style-type: none"> <li>• Please contact the after-sales service hotline</li> </ul>   |

## 11/Environmental protection instructions

| The Names and Quantity of Hazardous Substances in the Product |                      |        |        |              |            |              |
|---|----------------------|--------|--------|--------------|------------|--------------|
| Name of substances  | Hazardous substances |        |        |              |            |              |
|   | 铅 (Pb)               | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| Plastic components  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Temperature control parts                                     | ○                    | ○      | ○      | ○            | ○          | ○            |
| Fuse  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Power supply cord   | ○                    | ○      | ○      | ○            | ○          | ○            |
| PCB circuit board   | ✗                    | ○      | ○      | ○            | ○          | ○            |
| Fans  | ✗                    | ○      | ○      | ○            | ○          | ○            |
| Aluminum rods   | ○                    | ○      | ○      | ○            | ○          | ○            |
| Sealing ring  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Water pipe  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Heater  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Screws  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Packaging material  | ○                    | ○      | ○      | ○            | ○          | ○            |
| Plastic bags  | ○                    | ○      | ○      | ○            | ○          | ○            |

This form is prepared in accordance with SJ / T 11364

○: It indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

✗: It indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit specified in GB/T26572.



### 10-year environmentally friendly use:

It refers to the period during which the hazardous substances contained in this product will not leak or mutate, and the normal use of the product by users under the circumstances described in the product specification will not cause serious pollution to the environment or serious damage to users and their property.

### Cyclic arrow:

It means that this product is recyclable. After the service life has expired or it cannot work properly after maintenance, it should not be discarded at will. Please refer to regular recycling channels and enterprises qualified for handling discarded electrical and electronic products. Please refer to the national or local regulations on the disposal of used electrical and electronic products for the correct treatment.

## 12/Warranty card

- ① This product is guaranteed for the whole machine within one year from the date when the product invoice or purchase voucher is issued. The warranty of the whole machine and main parts is the same as the national three guarantees policy.
- ② During the warranty period, for any performance failure caused by the quality of the product itself, the customer is requested to repair it free of charge at the designated repair site with the completed warranty card and purchase voucher.
- ③ Please keep the purchase invoice or voucher properly.

Maintenance is not free of charge in the following cases

- ① Waiver of the warranty card and the valid invoice or proof of purchase.
- ② The invoice model is inconsistent with the repair product model or altered.
- ③ Failure caused by not operating the machine according to the requirements of the manual.

### Product information:

|                   |  |
|-------------------|--|
| Product name      |  |
| Product model     |  |
| Date of purchase  |  |
| Place of purchase |  |
|                   |  |

### Maintenance records:

| Maintenance Date | Maintenance Situation |
|------------------|-----------------------|
|                  |                       |
|                  |                       |
|                  |                       |
|                  |                       |

**Soleus Commercial Consulting (Shanghai) Co., Ltd (Trademark Holder)**

**Foshan Fangxin Network Technology Co., Ltd.**

After-sales service hotline: 400-8083-081

Official website: [www.soleusair.com](http://www.soleusair.com)

Manufacturer's address: No.304, Floor 3, Building A, No.12, Lvtian Road, Beiqu Community, Daliang Subdistrict, Shunde District, Foshan, Guangdong Province.