

01 **SOLEUS**AIR SOLEUSAIR BRINGS YOU A GOOD LIF 08/ Fault Analysis and Troubleshooting In case of the following general problems, users can troubleshoot by themselves. Possible causes . The power cord plug is not inserted in place Machine fails to work 2. There is no electricity in the socket; 1. The two UV control switches (pulleys) at the bottom do not contact the cleaned object at the same time or the down at the same time; eaned object is uneven; 2. The UV control switches (pulleys) cannot be pressed UV lamp fails to work up and down normally; 3. The UV lamp is damaged. 1. The suction inlet is blocked by foreign matters; 2. There are too many sundries at the metal filter screen and directly replace the filter element; Suction force becomes weak filter element; 3. The dust cup is not installed in place. complete machine.

1. The dust cup is full; 2. The suction inlet of the machine is blocked; Excessive noise 3. The filter accessories are not installed or incomplete. properly installed 1. Stop the machine and take out the roller brush to remove The roller brush stops working 1. The roller brush is tangled with foreign matters; 2. The belt between the roller brush motor and the roller during use brush falls off or breaks. or replacement of the belt. When the dust mite index is low, the red light of the dust Check if the suction inlet is blocked by foreign matters mite function indicator is foreign matters at the suction inlet always on. Handling of abnormalities • Cut off the power supply immediately and stop using the product in case of abnormal conditions, such as abnormal noise, excessive smoke, etc. If the product cannot work: please check whether the power supply is connected and the power button is turned on.
If the product still cannot work after the above inspection, please call our customer service hotline for consultation.

Troubleshooting 1. Check whether the plug is inserted in place and secured; 2. Check whether there is electricity in the socket; 1. Place the complete machine flat on the cleaned object to ensure that the UV control switches (pulleys) can be pressed 2. Check whether the UV control switches (pulleys) can move 3. Contact the after-sales service personnel to replace the UV Check and remove the foreign matters from the suction inlet; Check and clean the metal filter screen and filter element; or 3. Check whether the dust cup is correctly installed into the 1. Clean the dust cup; 2. Clean the suction inlet of the machine; 3. Check whether the filter accessories are complete and

the foreign matters; 2. Contact the after-sales service personnel for maintenance Remove the dust cup from the machine and clean the

02/紫外灯安全注意事项

序号	名称
01	除螨吸尘器
02	清洁毛刷
03	说明书

好生活 值得舒乐氏/ SOLFUSAIR BRINGS YOU A GOO

故障排除

1、将整机平放于被清洁物品,确保紫外线

2、检查紫外线控制开关(滑轮)可正常上

2、检查并清洁金属滤网和过滤滤芯;或直

1、停止机器运行,并将滚刷取出清理异物;

SOLEUSAIR BRINGS YOU A GOOD

控制开关(滑轮)能同时被按下;

1、检查插头是否插到位并稳固;

2、检查插座是否有电;

3、联系售后更换紫外线灯。

接更换过滤滤芯;

1、检查并清理吸口处异物;

3、检查尘杯是否正确装入整机。

3、检查过滤组件是否完整且安装好

从机器上取下尘杯,清理吸入口异物

下活动;

1、清洁尘杯;

2、清理机器吸入口;

故障现象

机器不工作

紫外线灯不工作

吸力变小

噪音过大

工作

尘螨指数较低时,

尘螨指示灯红灯常亮

machine to avoid accidents.

cause damage to the power cord;

causing harm to human body;

(gasoline alcohol products).

similar professionals.

damage or accidents.

power plug, otherwise it may cause electric shock.

可能原因

1、底部两个紫外线控制开关(滑轮)未同

2、紫外线控制开关(滑轮)不能被按下;

3、未安装过滤组件或过滤组件不完整。

检查机器吸入口是否有异物堵塞

2、滚刷电机与滚刷间皮带脱落或断裂。 2、联系售后维修或更换皮带。

08

1. Please keep the manual properly. If you transfer this product to a third party for use, be sure to attach this manual with the machine.

5. Do not connect the power plug of the machine when components such as dust cup or roller brush are not assembled.

11. Keep this product properly, and keep it out of reach of children and people who are unable to judge the environmental hazards.

16. Avoid keeping the mite remover close to heating appliances or directly exposed in the sun, so as to avoid fire hazards.

15. Do not use the machine to absorb high-temperature substances (cigarette butts, matches or hot ashes), ultra-fine substances (such as lime,

cement, gypsum powder, ashes, carbon powder, etc.), large sharp fragments (such as glass, iron nails, pins, etc.), dangerous goods (such

as solvents, descaling agents, etc.), chemical substances (such as acidic substances, detergents, etc.), flammable and explosive liquids

17. Before use, please check the area to be cleaned. If there are large pieces of paper, paper balls, plastic sheets or sharp objects, and things

thicker than the air inlet diameter, please remove them in advance to avoid the air inlet pipe from being blocked and affect the use of the

18. During use, if electric leakage or excessively high motor temperature or abnormal sound is found, such as excessively hot body, abnormal

19. Please check the dust cup regularly. If there is too much dust in it, please clean it in time to keep the vent unblocked, so as to avoid

21. In order to avoid danger, any damaged power cord must be replaced by the maintenance department designated by the manufacturer or

13. Avoid long-time operation when the suction inlet is blocked, so as to prevent machine damage or accidents.

(including children), unless they are supervised or instructed by others to ensure safe use.

sound, peculiar smell, weak suction and other abnormal conditions, stop using it immediately.

suction drop caused by blockage, motor heating, and the service life of the mite remover shortened.

2. Please read all the contents carefully to avoid any accident or damage to the product.

7. Do not store the product at a height to avoid the danger of accidental fall.

时接触被清洁物品或被清洁物不平整;

1、电源线插头无插到位;

2、插座没有电;

3、紫外线灯损坏。

1、吸口处有异物堵塞;

3、尘杯无安装到位。


2、机器吸入口处堵塞;

1、尘杯已满;

使用过程滚刷停止 1、滚刷有异物缠绕;

2、金属滤网和过滤滤芯处杂物太多;

产品名称	除螨吸尘器
额定电压	220V~
额定功率	450W
产品尺寸	270*391*216mm
执行标准	GB4706.1-2005/GB47
	(

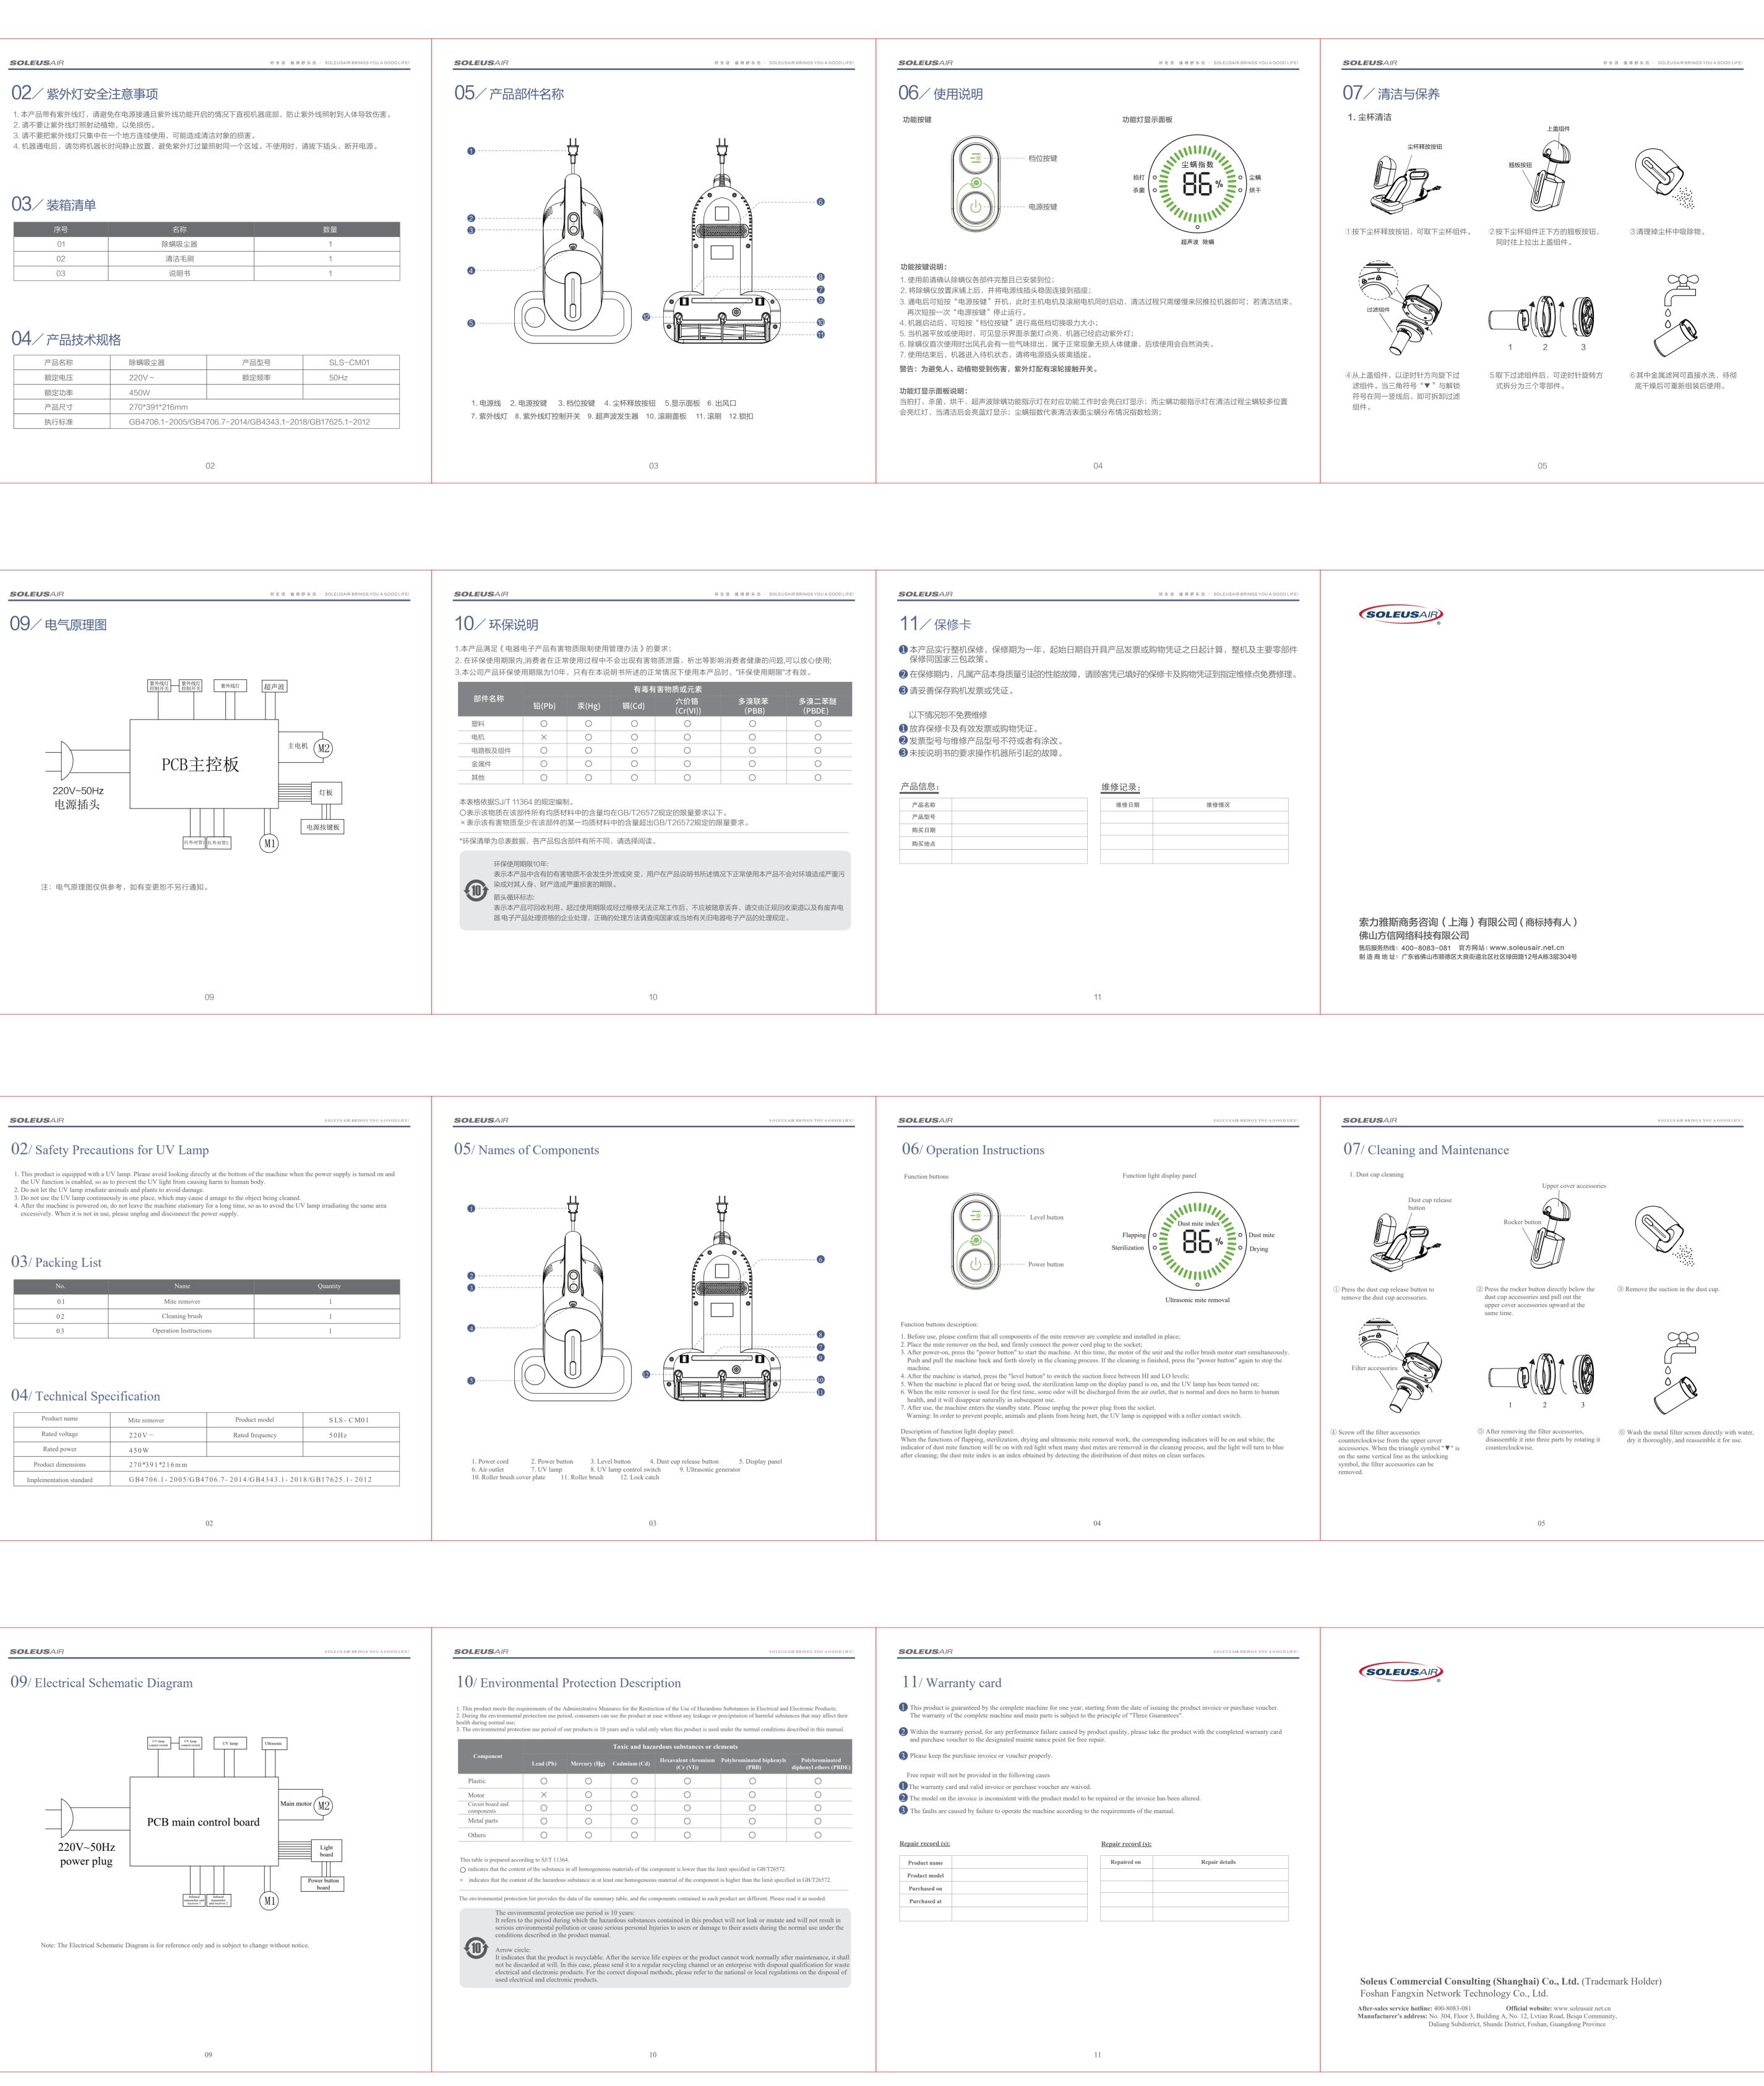


)3/ Packing List			
No.	Name		
0 1	Mite remover		
02	Cleaning brush		
03	Operation Instruction	ns	
04/ Technical Specification			
Product name	Mite remover		
Rated voltage	$220 V \sim$		
Rated power	450W		
Product dimensions	270*391*216mm		
Implementation standard	GB4706.1-2005/GB47	706	

oduct dimensions	270*391*216mm
ementation standard	GB4706.1-2005/GB4706
	02

SOLEUSAIR

09/ Electrical Schematic Diagram

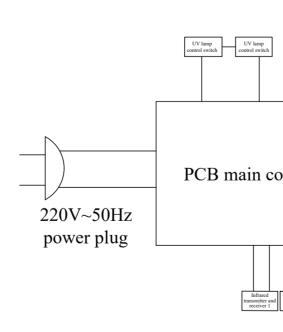

08