说明书　成品190*190mm　105g铜板纸　5色　订装

颜色 Coolgray 11c　Pantone 534　Pantone 186　黑色

1

舒乐氏蒸腾加湿器
TRANSPIRATION HUMIDIFIER
AHU-600Z1

使用说明书

感谢您购买本产品！请按产品说明书中说明书，并妥善保管。
执行标准：GB 4706.1-2005 / GB 4706.48-2009

2

01／产品结构图

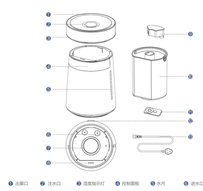

① 出雾口 ② 注水口 ③ 湿度指示灯 ④ 控制面板 ⑤ 水箱 ⑥ 进水口 ⑦ 发热盘 ⑧ 灯光触点 ⑨ 滤芯 ⑩ 水箱 ⑪ 滤纸圈 ⑫ 电源接口 ⑬ 电源线

备注：为了持续优化及升级产品，购买的实物与示意图可能略有差异，请以实物为准。

3

02／控制面板

03／装箱清单

序号	部件名称	数量
1	主机	1
2	遥控器	1
3	电源线	1
4	滤芯	1
5	滤纸圈	1
6	说明书	1

4

04／基本参数

型　号	AHU-600Z1
额定电压	220V~
额定频率	50Hz
额定功率	600W
额定容量	4.0L
额定加湿量	600mL/h
整机尺寸	269×269×410mm
执行标准	GB 4706.1-2005 GB 4706.48-2009

05／工作原理

加湿器利用发热盘煮沸液体，高温蒸汽上升，通过出气口，带动冷空气和高温蒸汽，使水分子随着气流扩散到空气中从而达到均匀加湿空气的目的。加湿器被设置保持恒定的湿度，可防止静电的产生。

06／产品特点

1.上加水设计，可直接从注水口加水，方便省事。
2.多档位、模式设计，满足多种加湿需求。
3.支持遥控器远程控制，操作便捷，安全稳准。
4.恒湿功能的湿度可设置湿度范围，40~75%RH，水洞舒适。
5.高温消毒杀死雪水菌，灭菌健康加湿。
6.具备缺水提醒，人性化设计。
9.透明水尺配合，观察水位更直观。

5

07／安全须知

容易重要！
● 请仔细阅读本说明书，确保正确使用，以及维护和安全。
● 请妥善保存说明书，请妥善保管！

⚠ 使用前须知

第一次使用加湿器，在通风良好的情况下，让加湿器连续工作约两小时，以除去其加热体表面保护材料的气味。
加湿器工作时，应保证其所在的空间通风性良好，第一次使用加湿器时，电器内部发出的一些小声音是正常现象。

使用该加湿器前阅读所有的安全说明

1.注水和清洁时请拔掉电源插头。
2.请勿使用手湿或电源插头，以免发生触电危险。
3.请勿随意拆卸，修理，改造本产品。
4.电源线不得打结，折叠，被重物挤压或改造使用，否则可能导致触电、短路、着火。
5.如果电源软线损坏，必须用专用软线或从其他制造商或维修部买到的专用电源线来更换。
6.长时间不使用时请拔掉电源。
7.禁用天气或长期不使用时，请拔出电源插头。
8.请勿在通电状态先倒掉水箱内的水，以免造成电器短路。
9.请勿让儿童或无法活动群眼方的人员操作机器。
10.产品使用中有异常现象，请立即拔去电源插头，并与售后联系。

6

08／使用说明

1.检查水箱及滤芯：
安装上组件，检查水箱和滤芯是否安装到位。

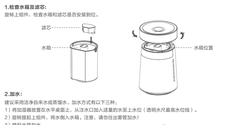

2.加水：
建议采用清净自来水或蒸馏水。加水方式有以下三种：
1）将加湿器放置在水平桌面上，从注水口加入清晰的水至上水位（请勿水只盛满水位线）。
2）旋转拆起上组件，将水倒入水箱。注意，请勿往出雾管加水！
3）提起水箱加水。

注意，不同地方不同水质，如北方地区水质较硬，直接使用自来水容易产生大量水垢，建议水质较硬地区使用软化后的水或直接使用纯净水。

7

3.连接电源：
将电源线连接到加湿器背部的电源接口，将电源插头插入符合产品要求的电源插座，接通电源，听到"滴"一声后，进入待机状态。

4.并按机 恒湿功能和模式切换：
1）短按电源按键，机器开启，颜码屏闪烁显示8CO。此时可以设定需要加湿的湿度，湿度调节范围40~75%RH和CO模式（CO为导致加湿模式）选择设定湿度后，机器显示当前实际环境的湿度，并与设定的湿度比较，若当前环境湿度低于设定的湿度，则机器开始加湿，加湿到达相环境湿度设定时，即停止加湿，然后维持当前湿度值。
2）机器工作过程中，可随时调节加湿档位，即从2档，可调节1~4档。

5.定时功能：
短按定时按键，依次循环切换CO->1->2->-->-->12小时，CO为关闭定时功能，停止操作，显示屏闪烁完成并确定当前状态，机器开始工作，到达设定时间后，机器停止工作进入待机状态。

6.降雾功能：
短按降雾按键，开启降雾功能，等离子发生器工作，发射等离子并始杀菌，再次短按降雾键可关闭降雾功能。

7.睡眠模式：
短按睡眠按键，可进入睡眠模式下，睡眠期以12小时以静音加湿。

8.灯效开关/关闭：
长按睡眠按键2秒，即可关闭上组件的装饰灯效。再次长按3秒可重新开启上组件的装饰灯效。
灯效颜色代表当前环境湿度：
1).湿度值＜40%RH，灯饰显示为赤橙色。
2).40%RH＜湿度值＜60%RH，灯饰显示为水蓝色。
3).60%RH＜湿度值，灯饰显示为青绿色。

9.警示灯闪烁提醒：
当警示灯闪烁时，说明机器不在工作，会有以下几种情形出现：
1）机器缺水，当机器缺水时，警示灯闪烁黑起，此时需要往机器加水，加水后，按住雾键，机器恢复正常工作状态。
2）上组件被摇起，当上组件被摇起时，机器停止工作，重新摆正上组件时，机器恢复正常工作状态。
3）机器倒斜，当机器在倒置状态或被倒时，机器停止工作，重新摆正机器后，机器恢复正常工作状态。

10.滤纸圈提醒：
1）使用滤纸圈时，需将红外线头对准机器接用。
2）电池为2V CR2032纽扣电池。
3）滤纸圈功能与机器接近上的功能一致，触发对应按键使用即可。

8

09／电气原理图

本图仅供参考，如有更新，恕不另行通知，以实物为准，最终解释权归本公司。



10／注意事项

1.安全
1）为了避免发生触电、火灾等危及人身财产安全的伤害，请勿必须说明书正确安装使用本产品。
2）产品未经固定成，请勿连通电源。
3）请勿随意拆卸机体内件。

2.保证
1）要动时，请务必使产品停止运行，并拔出电源插头。
2）请远离使产品时，请先清空水箱内残留的水。

3.放置
1）在室环境首次使用加湿器，请先在室温下放置30分钟，以防温度骤变引起水箱破损。
2）请放置于平坦位置，避免倾斜。
3）请勿将加湿器直接放在木质平面上使用，以免使其受潮变形受损。
4）请将加湿器放置在需要高，电器30米以外位置使用，以免受潮。
5）请放置在远离热源的地方，避免阳光直射。
6）水箱等容积时间放置时，必须清空储水。

9

4.电源线
按照下列指示使用电源线和插座，以免发生火灾，触电或破坏：
1）必须连接适合电源插座头的电源插座。
2）不可拉扯电器线。
3）在进行维护作业或移动加湿器之前，请务必断开电源。

5.水箱
1）切不可从机器上面注入SO℃以上的热水或水箱内。以免损坏机器。
2）切不可让水从出雾口注入，高温会有水蒸雾干有害于人体，以免造成伤害。
3）在室温低于0℃时，请将水箱内的水倒出，以免结冰导致机器损坏。
4）请不要将金属品、化学药品、洗涤剂放入水箱使用，否则会出现机器损坏，空气质量变差现象。
5）倒出水箱内的水时,请先关机并拔掉电源插头。

6.放热盘
不可用锐物加放热盘，放热盘长期通使用会造除彩色处理。

7.加水
注水时请放掉电源插头。

8.使用中
1）出产品发生异响，异味，请立即停止使用。
2）由于自然出雾的水蒸气，请小心使用机器，避免烫伤。
3）请勿在，情况或结机器。
4）家用燃气阀加湿气灶，燃气热水器等同时使用时，请通风换气，以一氧化碳中毒。

9.使用限制
1）以下情况时请勿使用,否则会发生触电，火灾以及其他损害）
1）请在倒和加湿器,否则可能导致水位超错甚至水外溢，因此使用时需放置平稳。
2）电源电压必须要与本产品额定电压一致，如电源电压不相符，请勿使用产品。
3）请勿在超出正常室温范围（5°-40°C）的环境中使用。

10.清洁
清洁时，请拔掉电源插头，防止电器内部进水。

10

11／故障分析及排除

无法正常开启	1.电源插头未插牢固 2.机器开关没有打开 3.电源未接通	1.插好插头 2.打开机器开关 3.检查电源
工作状态下无雾	1.机器低位需等待3分钟预热出雾 2.水箱缺水	1.等待3分钟 2.注入水
雾量时不有	1.水箱未放回机身 2.出厂前件触点有污渍	1.将上组件放回机身，并按特别位 2.请试触点上的污渍后可恢复正常工作
警示灯闪烁	1.水箱缺水 2.上组件未放特别位 3.机器过于倾斜	1.加水完成后按住雾键可恢复 2.将上组件按特别位 3.移动机器到水平位置

异常处理
产品如出现异常情况时，即刻停止使用，并拔掉电源，关上出雾口。
如出现产品不能工作，请检查电源是否正常，并关闭键盘是否打开。
如经上述检查，产品还是不能工作，请联系当地经销商或售后服务公司检查或维修或更换产品。

11

12／环保说明

1.产品满足《电器有关产品有害物质限制使用管理办法》的要求。
2. 在环保使用期限内,消费者在正常使用过程中不会出现有害物质泄露，析出等影响消费者健康的问题,可以放心使用。
3.本公司产品环保使用期限为10年，只有在本说明书所述的正常情况下使用本产品时，"环保使用期限"才有效。

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
线路板组件	×	○	○	○	○	○
电源线及其接线	○	○	○	○	○	○
外壳及未接线件	○	○	○	○	○	○
螺钉灯	○	○	○	○	○	○
水箱组件	○	○	○	○	○	○
过滤器	○	○	○	○	○	○
热能管管	○	○	○	○	○	○
隔离罩子外壳件	○	○	○	○	○	○
硅胶件	○	○	○	○	○	○
滤纸圈	×	×	×	○	○	○

本表格依据SJ/T 11364的规定编制。
○表示该物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。
×表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。

*环保使用为在典型能、客户及在条件有所不同，请选择相应。

环保使用期限10年:
您从本产品中作为您的有害物质不会发生外泄或突变，用户在产品说明书所述情况下正常使用本产品不会对环境造成严重污染或对人身、财产造成严重损害的期限。

重金属材料表:
表示本产品可回收利用。假设使用期限结束后设备报废后其工作时，不应被随意丢弃，请交给正规回收渠道以及有资格电器专业产品处理资质的企业处理，正确的处理方法请咨询国家法规当地有关环保部门或产品的出售商。

12

13／维护与保养

1.清洗前先切实拔开机样插电源插头。
2.机每可直接用干净纯饮用水擦拭干净,请勿每用清洁一次。
3.加湿器长期清洗:取出水箱倒掉,用白醋清洗剂大半杯,倒入醋清洗剂大半杯后,用清水冲洗。请定每1天清洗一次。
4.加热盘长期清洗:取出水箱倒掉,用白醋清洗剂大半杯,倒入水或用1/100ml白醋，然后放回水箱组件（水箱组件倒转有水的状态），通电打开20分钟，再倒出并用清水冲洗，请定每7天清洗一次。
5.请保持机外干燥，触点可用干净软布擦拭干净，请定每周清洗一次。
6.之组件被制作清洁意保护，请放大方施压或用手敲可。

14／保修说明

1.原系售后
说明书提供产品起初7天内，享受七天无理由退换货服务；如因用户发现原因（非质量问题）导致的退换货，运由用户承担物流运费。

2.保修原则
1）在到货日起即7天内，享受七天无理由退换货服务；如因用户发现原因（非质量问题）导致的退换货，运由用户承担物流运费。
2）在第8~30天内因质量问题导致产品无法正常使用，享受免费换新服务；
3）本产品享受免费质保1年，1年内商品出现质量问题影响正常使用,可享受免费维修服务，且厂家承担维修回寄费用；
4）以下情况不享受退换货服务：
a. 未填写售后服务保修卡，且配件不齐的商品（提商品提送的赠品进一起寄回且产品无人为破损）；
b. 产品出现人为破损，发票丢失等不享受优惠退换。

3.保修方法：
1）更换配件或享受免费维修服务时，烦请向保修卡发货买证原件给现场客服；
2）若出现质量问题，可因原保证期内按售后政策进行维修或进行换新+00~60天3~0年!按供热性能保修换后程序。

13

15／保修卡

❶ 本产品买行整机保修，保修期为一年，起始日期自开具产品发票或购物凭证之日起计算，整机及主要零部件保修间国家三包规定。
❷ 在保修期内，凡属产品本身质量引起的性能故障，请联客凭已填好的保修卡及购物凭证到指定维修点免费修理。
❸ 请妥善保存购机发票或凭证。

以下情况恕不免费维修
❶ 没有保修卡及有效发票或购物凭证。
❷ 发票型号与维修产品型号不符或者有涂改。
❸ 未按说明书的要求操作机器所引起的故障。

产品信息：

产品名称	
产品型号	
购买日期	
购买地点	

维修记录：

维修日期	维修情况

索力雅斯商贸咨询（上海）有限公司
上海市闵行区光华路2118号第3幢1841室
网址：http://www.soleusair.com
☎ 售后服务热线：400-8083-081

14

15

SOLEUS
TRANSPIRATION HUMIDIFIER
AHU-600Z1

Operation Instruction

Thank you for purchasing this product! Please read this manual carefully before using the product and keep it properly.
Implementation standard: GB 4706.1-2005 / GB 4706.48-2009

16

01／Product structure diagram

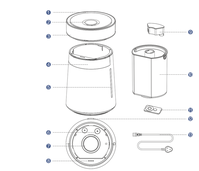

① Fog outlet ② Water injection port ③ Humidity indicator ④ Control panel ⑤ Water gauge ⑥ Water inlet ⑦ Heating plate ⑧ Light contacts ⑨ Filter element ⑩ Water tank ⑪ Remote controller ⑫ Power interface ⑬ Power cord

Note: In order to continuously optimize and upgrade the products, there may be some differences between the purchased physical objects and the interest chart. Please refer to the physical objects.

17

02／Control panel

03／Packing list

No.	Part name	Quantity
1	Main machine	1
2	Remote controller	1
3	Power cord	1
4	Filter element	1
5	Cleaning brush	1
6	Instructions	1

18

04／Basic parameter

Model	AHU-600Z1
Rated voltage	220V~
Rated power	50Hz
Rated power	600W
Rated capacity	4.0L
Rated humidification capacity	600mL/h
Dimension	269×269×410mm
Executive standard	GB 4706.1-2005 GB 4706.48-2009

05／Working principle

The humidifier uses the heating plate to boil the liquid, the high-temperature steam rises, and drives the cold air and the high-temperature steam through the air outlet, so that the water molecules diffuse into the air along with the airflow, thus achieving the purpose of uniform humidifying the air. Humidifier can keep ideal humidity in the room and prevent static electricity.

06／Product features

1. The upper water adding design can directly add water from the water injection port, which is convenient and saves trouble.
2. Multi-gear and horizontal design to meet various humidification requirements.
3. Support remote control by remote controller, which is convenient to operate, safe and accurate.
4. The humidity of constant humidity function can be set in a humidity range of 40-75%RH, which is moist and comfortable.
5. High temperature and plasma sterilization, sterile and healthy humidification.
6. Water shortage reminder, humanized design.
9. With the transparent water gauge, it is more intuitive to observe water level.

19

07／Safety instruction

Very important!
● Please read this manual carefully, make sure it is used correctly, and it is difficult to protect and install.
● The instruction contains warranty card, please keep it properly!

⚠ **Precautions before use**

When using the humidifier for the first time, let the humidifier work continuously for about two hours under the premise of good ventilation, so as to remove the smell of the protective material on the surface of its heating element for the first time.
When the humidifier is used for the first time, the sound of water is heated is normal.
When using the humidifier for the first time, it is normal for some small sounds inside the electrical appliance.

Read all safety instructions before using the humidifier.

1. Please unplug the power plug when filling water and cleaning.
2. Do not use wet hands to plug and unplug the power plug, so as to avoid the risk of electric shock.
3. Please do not disassemble, repair or modify this product without authorization.
4. The power cord shall not be knotted, damaged, squeezed by heavy objects or modified for use; otherwise it may lead to electric shock, short circuit and fire.
5. If the power cord is damaged, it must be replaced with a special cord or a special power cord bought from other manufacturers or maintenance departments.
6. This machine is for indoor use only.
7. Please pull out the power plug during thunderstorm or when not in use for a long time.
8. Do not turn over the machine when it is powered on or there is water inside, so as to avoid damaging the internal electronic components.
9. Do not let children or people who are incapable of taking care of themselves operate the machine.
10. If there is any abnormality in the use of the product, please unplug the power plug immediately and contact after-sale.

20

08／Instruction

1. Check the water tank and filter element:
Rotate the upper component and check whether the water tank and filter element are installed in place.

2. Add water:
It is recommended to use clean tap water or distilled water. There are three ways to add water:
1) Place the humidifier on a horizontal table, and add a proper amount of water from the water injection port to the upper water level (the highest water level of the transparent water gauge).
2) Rotate and lift the upper component, and pour the water into the water tank. Note: Do not add water to the mist outlet pipe!
3) Lift the water tank and add water.

Note: Different places have different water quality. For example, if the water quality in the north is hard, it is easy to produce a large amount of scale when using tap water directly. It is recommended to use softened water or use purified water directly in hard areas.

21

3. Connect the power supply:
Connect the power cord to the power interface on the back of humidifier, insert the power plug into the power socket that meets the product requirements, turn on the power supply, and enter the standby mode after hearing a "beep".
4. On/Off Constant humidity function and gear shift:
1) Press the power button briefly, and the machine will start, and the digital screen will flash to display CO. At this time, you can set the desired humidification humidity, the adjustable humidity range is 40~75%RH and CO mode (CO is the continuous humidification mode), the machine will display the humidity of the current actual environment and compare it with the set humidity. If the current environmental humidity is lower than the set humidity, the machine will start humidification, humidification to the humidity when the current environmental humidity reaches the set humidity. It will maintain the current humidity value.
2) During the working process of the machine, the humidification gear can be adjusted at any time, with the adjustable range of 1-4, the adjustable gears of 1-4.
5. Timing function:
Press the timer button briefly, and then cycle and switch CO->01->02->-->-->12 for 12 hours. When CO turns off the timer function, the timer operation is stopped, the display screen flashes and the current state is determined, and the machine starts to work. When the set time is reached, the machine stops working and enters the standby mode.
6. Sterilization function:
Press the sterilization button briefly to start the sterilization function, the plasma generator works, and the plasma is emitted to start sterilization. Press the sterilization button again to turn off the sterilization function.
7. Sleep mode:
Press the sleep button briefly to enter the sleep mode. In the sleep mode, the machine is humidified silently in 1st gear by default.
8. Light On/Off:
Press the sleep button for 3 seconds to turn off the decorative light effect of the upper component. Press again for 3 seconds to restart the decorative lighting effect of the upper component.
The decorative lighting effect of the lower component:
1). The humidity value is ≤40%RH, and the lighting display is reddish orange;
2). 40%RH < humidity value < 60%RH, and the lighting is displayed as aqua blue;
3). 60%RH < humidity value, the lighting display is turquoise.
9. Warning lights flashing to remind:
When the warning light flashes, it means that the machine is not working, and the following situations will occur:
1) Water shortage: when the machine is short of water, the warning light flashes and lights up. At this time, it is necessary to add water to the machine. After adding water, press any key to restore the normal working state of the machine.
2) The upper component is lifted: when the upper component is lifted, the machine stops working, and when the upper component is reloaded, the machine returns to normal working condition.
3) The machine is inverted: when the machine is inverted or tilted when it is powered on, the machine stops working, and after the machine is realigned, the machine returns to normal working condition.
10. Remote control:
1) The remote control is a remote controller, it is necessary to aim the infrared head at the machine.
2) The battery is 2V CR2032 button cell.
3) The functions of the remote controller are the same as those on the machine panel, and the corresponding buttons can be triggered for use.

22

09／Electrical schematic diagram

This drawing is for reference only, and will be updated without prior notice. The material object shall prevail, and the final interpretation right belongs to our company.



10／Matters need attention

1. Installation.
1. In order to avoid electric shock, fire and other injuries endangering personal and property safety, please be sure to install and use this product correctly according to the instructions.
2. If the product is not fixed, please disconnect the power supply.
3. Please do not disassemble the body components at will.
2. Handling.
1) When moving, be sure to stop the product and pull out the power plug.
2) When transporting or moving the product, please empty the remaining water in the water tank first.
3. Placement.
1) When using the humidifier for the first time in a new environment, please leave it at room temperature for 30 minutes to prevent the water tank from being damaged due to sudden temperature change.
2) Please keep it in a ventilated place.
3) Do not put the humidifier directly on the wooden plane for use, so as not to damage it due to damp deformation.
4) Please place the humidifier 2 meters away from furniture and electrical appliances to avoid damp.
5) Please keep it away from the heat source and avoid direct sunlight.
6) When the water tank is placed alone for a long time, the water storage must be emptied.

23

4. Power cord
Use the power cord and socket according to the following instructions to avoid fire, electric shock or damage:
1) The power socket suitable for the power cord plug must be connected.
2) Do not pull the power cord.
3) Be sure to disconnect the power supply before carrying out maintenance work or moving the humidifier.
5. Water tank
1) Never inject hot water above 50°C into the water tank from the upper part of the machine to avoid damaging the machine.
2) Never allow water to be injected from the mist outlet. Please clean the water at the base with a dry cloth to avoid damaging the machine.
3) When the room temperature is lower than 0 °C , please pour out the water in the water tank, so as to avoid freezing and causing damage to the machine.
4) Please do not put metal products, chemicals and detergents into the water tank for use, otherwise the machine will be damaged and the air quality will become worse.
5) When pouring out the water in the water tank, please shut down and unplug the power plug first.
6. Heating plate.
Do not scrape the heating plate with hard objects. Please treat the scale of the heating plate with appropriate scale remover.
7. Add water
Please unplug the power plug when adding water.
8. In use
1) In case of abnormal sound and odor, please stop using the product immediately.
2) Please use the machine carefully to avoid scalding, as it will spray hot water vapor.
3) Do not sit, lean or tilt the machine.
4) When household gas appliance (such as gas stove and gas water heater, etc.) is used at the same time, please ventilate to avoid carbon monoxide poisoning.
9. Restrictions on use
(Do not use it under the following conditions, otherwise electric shock, fire and other damages will occur)
1) Do not tilt the humidifier, otherwise it may cause water level error or even water overflow, so it should be placed stably when in use.
2) The power supply voltage must be consistent with the rated voltage of the product. If the power supply voltage does not match, please do not use the product conveniently.
3) Do not use it in an environment beyond normal room temperature (5 °C -40°C).
10. Cleaning
When cleaning, please unplug the power plug to prevent water in the appliance.

24

11／Trouble analysis and troubleshooting

Phenomenon	Probable causes	Processing method
Unable to open normally	1. The power plug is not firmly inserted 2. The machine switch is not turned on 3. The power supply is not connected	1. Plug in the plug 2. Turn on the machine switch 3. Check the power supply
There is no fog in working condition	1. When the machine is just started, it needs to wait for 3 minutes to preheat the mist	1. Wait for 3 minutes
Decorative lights don't work	1. The upper component is not put back into the fuselage 2. The contacts of the upper/lower components are contaminated	1. Put the upper component back into the fuselage and rotate it in place 2. After wiping the stains on the contacts, it can resume normal operation
Warning lights flashing	1. Water tank is short of water 2. The upper component is not rotated in place 3. The machine is too inclined	1. Press any key after adding water to restore 2. Rotate the upper component in place 3. Move the machine to a horizontal position

Exception handling
In case of abnormal conditions, such as abnormal noise, a large amount of smoke, the power supply should be cut off immediately and the product should be stopped.
If the product fails to work, please check whether the power supply is connected properly and whether the switch button is turned on.
If the product still doesn't work after the above inspection, please go to the designated repair center for repair or call our customer service hotline for consultation.

25

12／Environmental protection instructions

1. This product meets the requirements of Administrative Measures for Restricting the Use of Harmful Substances in Electrical and Electronic Products.
2. During the period of environmental protection use, consumers will not have any problems affecting consumers' health such as leakage and precipitation of harmful substances in the product in the normal use process.
3. The environmental protection service life of our products is 10 years, and the "environmental protection service life" is only effective when the products are used under normal conditions as described in this manual.

部件名称	Toxic and harmful substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Circuit board component	×	○	○	○	○	○
Power lines and connecting wires	○	○	○	○	○	○
Enclosure and water tank component	○	○	○	○	○	○
Screw	○	○	○	○	○	○
Water pump component	○	○	○	○	○	○
Filter	○	○	○	○	○	○
Heat-shrinkable tubing	○	○	○	○	○	○
Plug-in terminal housing parts	○	○	○	○	○	○
Silicone parts	○	○	○	○	○	○
Remote controller	×	×	×	○	○	○

This table is prepared according to the SJ/T 11364 provision
: It indicates that the content of the hazardous substance in all homogenous materials of the part is below the limit requirements stipulated by GB/T26572.
× It indicates that the content of the hazardous substance in at least one homogenous material of the part exceeds the limit requirements stipulated by GB/T26572.

* The environmental protection list is the summary date, and the components contained in each product are different, so please choose to read it.

Environmental protection service life is 10 years:
It means that the harmful substances contained in this product will not leak or mutate, and the normal use of this product by users in the specified conditions of the product manual will not cause serious pollution to the environment or cause serious damage to their personal and property.

Loop flag:
The materials of this product can be recycled. After the expiration of the service life or failure to work normally after repair, it should not be discarded at will, but should be handled by regular recycling channels and enterprises qualified to handle discarded electrical and electronic products. For correct handling methods, please refer to the national or local regulations on the handling of used electrical and electronic products.

26

13／Maintenance

1. Before cleaning, be sure to shut down and unplug the power supply.
2. The machine body can be directly wiped clean with a clean soft-wet cloth. It is recommended to clean it once a week.
3. Scale cleaning of mist outlet pipe: take out the water tank component, soak the place with scale in white vinegar, and then rinse with clear water. It is recommended to clean it every 15 days.
4. Scale cleaning of heating plate: take out the water tank component, pour citric acid solution (10g citric acid, 200mL water) or 100mL white vinegar into the heating plate at the bottom, and then put it back into the water tank component (the water tank component is kept in water state), which needs to run for 20min, and then pour it out and rinse with clear water. It is recommended to clean it once every 7 days.
5. Please keep the contacts dry. The contacts can be wiped clean with a clean soft cloth. It is recommended to clean them once a week.
6. Please pay attention to the protection of the contact pins of the upper component, and do not apply great pressure or clash by hand.

14／Warranty description

1. Contact after-sales
Explain the reasons for return and exchange, and reach a return and exchange agreement. All users who purchase products from the company enjoy the seven-day no-reason return and exchange service within 7 days according to the Provisions on Responsibility for Repair, Replacement and Return of Some Commodities stipulated by relevant state departments. (The whole machine is guaranteed for one year and the motor for three years)

2. Warranty principle
1) Within 7 days from the first day of receiving the goods, enjoy the service of returning goods without reason for 7 days;
In case of return and exchange caused by subjective reasons (non-quality problems), the user shall bear the return freight;
2) Within 8-30 days after receiving the goods, the products cannot be used normally due to quality problems, and enjoy free replacement service;
3) This product enjoys a free warranty for one year. If the quality problem of the product affects the normal use within one year, it can enjoy the free maintenance service, and the return and repair shipping fee shall be borne by the user.
4) Do not enjoy the return service under the following circumstances:
a. Goods without after-sales service warranty card and with irregular accessories (gifts given with the goods must be sent back together and the products are not damaged artifically);
b. If the product is damaged artificially, the invoice is lost, etc., it will not be returned without reason.

3. Warranty method:
1) When replacing accessories or enjoying free maintenance service, you must provide warranty card and purchase voucher picture to online customer service;
2) In case of quality problems, you can take pictures and keep evidence to consult online customer service or call the merchant's 400-8083-081 service hotline to provide after-sales guidance.

27

15／Product warranty card

❶ This product is guaranteed by the whole machine, with a warranty period of one year. The starting date is calculated from the date when the product invoice or purchase voucher is issued. The warranty of the whole machine and main parts is the same as the national three guarantees policy.
❷ During the warranty period, if the performance failure is caused by the quality of the product itself, the customer is requested to repair it free of charge at the designated repair point with the completed warranty card and shopping voucher.
❸ Please keep the purchase invoice or voucher properly.

The following conditions will not be repaired free of charge
❶ Loss of the warranty card and valid invoice or purchase voucher.
❷ The invoice model is inconsistent with the repair product model or altered.
❸ Failure caused by not operating the machine according to the requirements of the manual.

Product information:

Product name	
Product model	
Date of purchase	
Place of purchase	

Maintenance records:

Maintenance date	Maintenance situation

SOLEUS COMMERCIAL CONSULTING (SHANGHAI) CO. LTD
Manufacturer's address: Room 141, Building 3th, No. 2118, Guanghua Road, Minhang District, Shanghai
Official website: www.soleusair.com
☎ After-sales service hotline: 400-8083-081

28

SOLEUS COMMERCIAL CONSULTING (SHANGHAI) CO. LTD
Manufacturer's address: Room 141, Building 3th, No. 2118, Guanghua Road, Minhang District, Shanghai
Official website: www.soleusair.com
☎ After-sales service hotline: 400-8083-081